 


# User's Manual

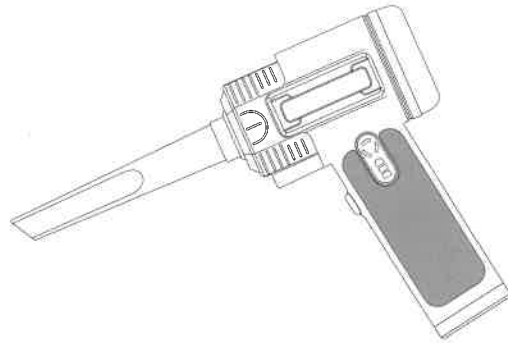

## CORDLESS DUST BLOWER

VC023

### ⚠ WARNING

 
 
Thank you for choosing our products. Please read this manual carefully before operating. Please keep this manual for future reference. Please refer to the actual object, if the picture does not match the actual object.

- Do not place in high temperature or humidity.
- It is forbidden to modify, disassemble, crush, or throw into fire.
- Do not continue to use if there is an abnormality.
- It is strictly forbidden to use unlicensed or incompatible adapters and charging cables to charge the product, which may cause malfunction and danger.
- This product is not intended for use by children or persons with physical, sensory, or mental impairments.
- If you do not use this product for a long time, please store the product in a cool and dry environment, in order to ensure the service life of the product battery, please fully charge and discharge the product at least once every 3 months.

### 📌 NOTE


- Long press the power on button indicator flashing, the compressed air duster cannot be started, the battery is insufficient, please charge it in time.
- Please use the charging cable supplied by this machine to charge the product, or use a mobile phone adapter with safety certification of 5V/2A and above and the standard charging cable to charge the product, and it is forbidden to purchase an adapter to charge the product without permission.
- As the number of times the product is used increases, the compressed air duster may decay in terms of its useful life.
- After use, please keep the product in a cool, dry, away from high temperature, high humidity and high dust environment.
- Due to the built-in high-rate lithium battery, it is strictly forbidden to disassemble the product in case of abnormal noise or other suspected quality problems.
- Do not use this product to absorb water and wet objects, otherwise it will damage the motor and cause permanent damage to the product, and the product quality problems caused by this behavior are not covered by the product warranty.
- After use, please keep out of reach of children, children are strictly prohibited from operating without permission.
- This product is not suitable for use in high magnetic field environment.

### Product Introduction

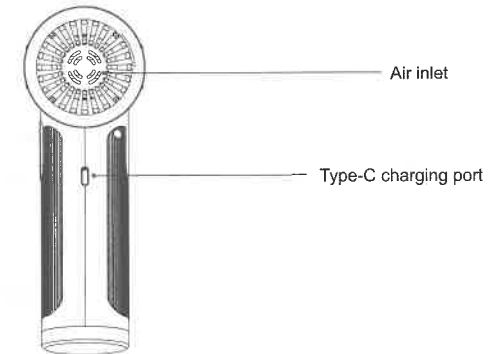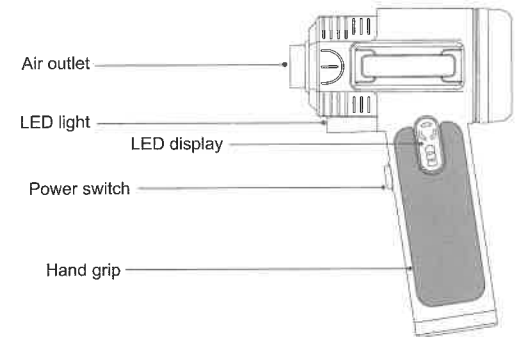

## Accessories installation and use
 
### Blowing/Inflatable function

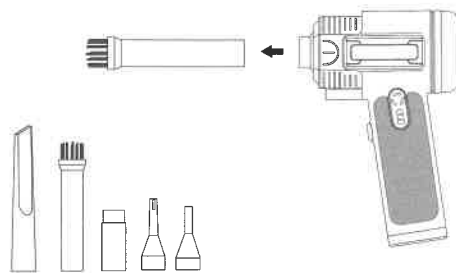

Nozzle(1): Clean up the dust in OA equipment or narrow spaces where tools can not reach out.

Nozzle(2): It can clean up the dust of keyboards, computer cases, motherboards, etc.

Nozzle(3): For PVC swimming pools and inflatable beds, etc.

Nozzle(4): For swimming ring/beach ball/yoga ball inflation; Airblowing on barbecue charcoal.


Nozzle(5): For camera lenses/jewelry/mobile phone charging ports and other items; At the same time, it can also inflate lifebuoys, balloons, yoga balls, etc.

**⚠ Note: Turn off the machine before replacing the accessory.**


## Operate Instruction




① Press and hold the power button for 3 seconds to start the machine, and the speed is in first gear.

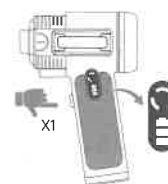

 ② In the standby state, press once to switch to the second gear

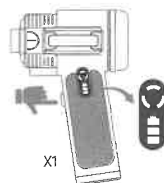

 ③ In second gear, press once again to switch to third gear

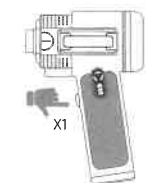

④ In the third gear state, press once again to switch to standby mode, and the gear number display screen flashes; Press and hold for 3S to power off. (If you don't do anything in standby mode for one minute, it will automatically shut down)

**⚠ Note: If the machine is suddenly shut down during use, please check whether the air inlet is blocked, if it is blocked, please clean it up and continue to use it normally. If the system is turned off due to insufficient power, please charge the product in time Electricity.**

## Charging method

During use, the battery power gradually decreases as the time of use increases, and the current battery level can be observed through the digital display. If the power is turned off during use, please use the supplied charging cable to charge the product.



**Fully charged**  
(Battery icon is always on while charging)



**Low battery**  
(The battery is low, the screen turns off after the digital tube flashes 5 times, please charge)



**Charging status**  
(The battery icon flashes and the charge gradually increases. Plus, charging time 3-3.5H)

Recommend using 5V=2.4A charger.

5V=2.4A



(Tip: This product does not contain adapters)

1. Put the vacuum cleaner on the desktop/plane;
2. Insert the USB power cable into the charging hole of the vacuum cleaner;
3. Connect the other end of the power cord with the 5V=2A and above USB socket, such as mobile phone charger, mobile power bank, etc.