



1. 1x 9 inch Adjustable die cutting and embossing machine

2. 1x White base plate 3. 2x Clear cutting plates

4. 1x Magnetic sheet 5. 1x Silicone mat

6. 2x Embossing folders 7. 2x Die cut set

8. 1x Clear Stamp set 9. 10x A4 Cardstock papers

If you experience a poor cut/embossing, try one or more of the following tips.

1. Check your layered sandwich of plates is correct.
2. After the stacked sandwich has emerged from the machine, reverse the rotation of the handle to cut/emboss a second time.
3. Move the die and partially cut cardstock to the edge of the plate before running through the machine again.
4. Add one or more shims of cardstock under the die/embossing folder to increase the thickness of the sandwich. Always start with a single thin paper shim only.
5. Transparent pad is often recommended to change the use of the other side.
6. When using the die-cut, the blade of the die should face the paper, but not the black magnetic sheet. (Refer to the reverse side for correct sandwich)
7. The transparent stamp included in the set is for use with the ink pad, please do not pass through the machine.



1. Children should be supervised when using the machine. Take care when using dies and store away from children. This appliance is not intended for use by persons including children with reduced physical sensory or mental capabilities or lack of experience and knowledge unless under supervision or under instruction concerning the use of the appliance from a person responsible for their safety. Children should be supervised to ensure they do not play with this appliance. This is not a toy.
2. Never force your sandwich into the machine. If the movement of the sandwich into or through the machine feels too tight, stop and check that your sandwich is correct and that the plates are evenly lined up and the sandwich is centred in the middle of the aperture of the machine. Attempting to use the incorrect sandwich or forcing the machine will cause damage to your machine and void your warranty.
3. Clean your machine with a slightly damp cloth only. Do not use harsh cleaning products or chemicals. Do not apply oil to any part of the mechanism. Do not immerse in water.
4. Do not open any part of the machine-this will void your warranty.

MANUAL FOR THE CUTTING AND EMBOSSEING MACHINE

This machine is a cutting machine where you can adjust the rollers in height. This allows you to increase or decrease the distance between the rollers. As a result, the machine can be used for all types of embossing folders and cutting templates where you always use the same set of plates. When using the machine: place it on the table and push the 2 platform down. Place the die or embossing folder with the paper between the 2 transparent plates. Place it on the white base plate and then turn this set through the machine. If you do not see the desired result, you can increase or decrease the distance between the rollers by turning the knob.

BEFORE YOU BEGIN:

Assembling your machine.

- Remove the die cutting machine from the packaging.
- With the machine facing towards you, remove the protective cap from the metal spindle on the right hand side of the machine.
- Place the handle piece onto the spindle and insert the screw. Use an allen key to tighten.
- Press the end plug over the screw.




ATION INSTRUCTIONS



The smaller the button number, the tighter the bearing!


FOR EMOBSSING(2.2MM)

▲ button number 5-7

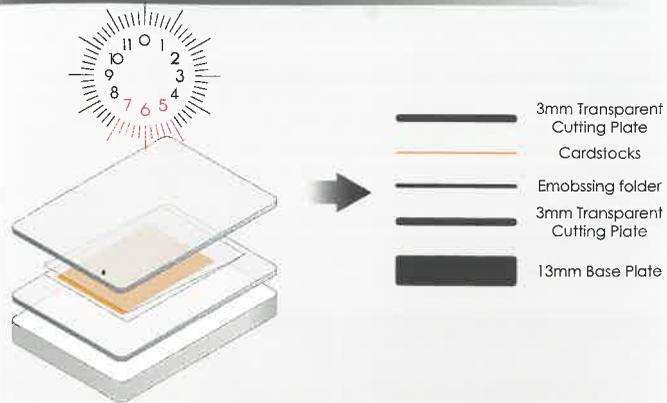


FOR EMOBSSING(3.2MM)

▲ button number 7.5-0(12)

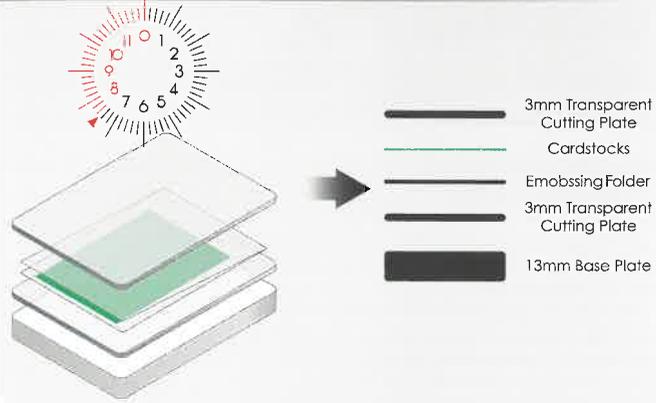


FOR EMOBSSING(3.8MM)

▲ button number 8.5-0(12)

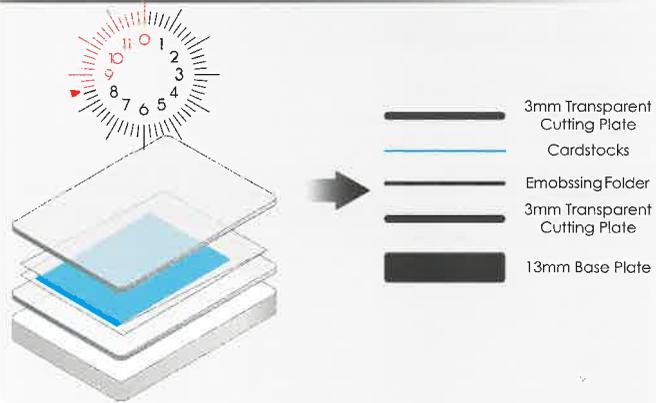


FOR DIE CUTTING(0.8MM)

▲ button number 0-3

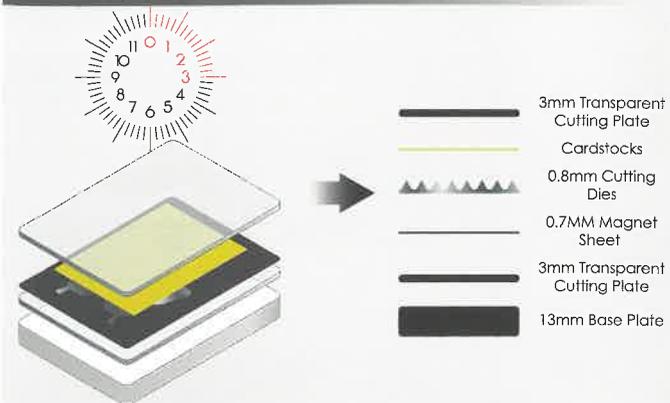


FOR DIE CUTTING(1.5MM)

▲ button number 2-5

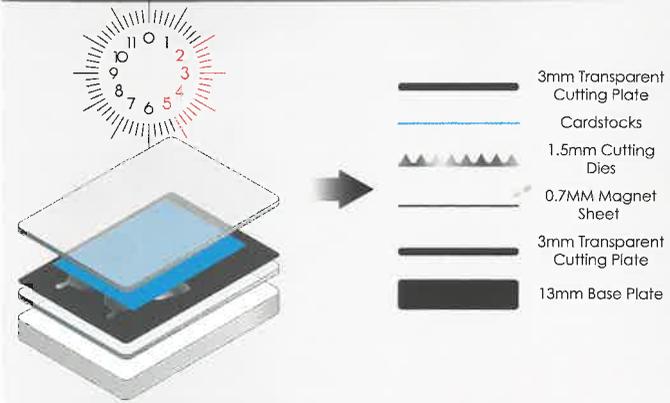

FOR EMOBSSING USING A DIE

▲ button number 3.5-6.5

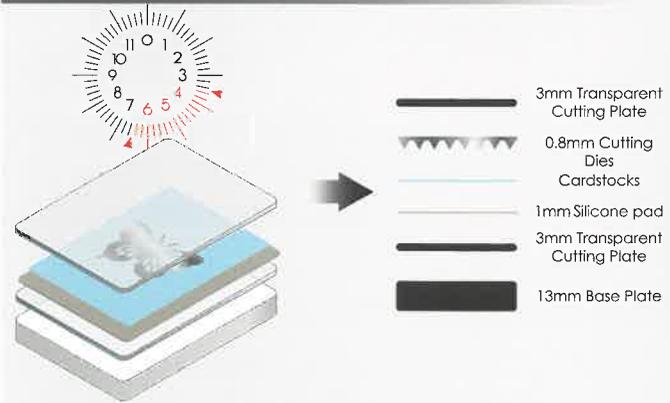

Find
Scrapblooms



THANKS FOR YOUR PURCHASE
IF YOU ENCOUNTER ANY PROBLEMS
PLEASE CONTACT US BY EMAIL
findscrapblooms@163.com