

Can slab

Ultrablade PRO

Automatic
Can Opener

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:


- Do not disassemble, repair, or alter the product without authorization.
- Toddlers, infants and people who are unable to operate should be supervised by a parent or adult.
- Do not place the can opener in high temperature condition or expose it to the sun.
- Do not put this appliance in water or any other liquid to protect against the risk of electrical shock. Not dishwasher safe.
- Avoid touching the moving parts with bare fingers.
- Do not open pressurized (aerosol-type) cans.
- Do not open cans of flammable liquids such as lighter fluids.
- Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.

To watch a quick instructional video on how to use the can opener, scan this QR Code!



P1

PARTS

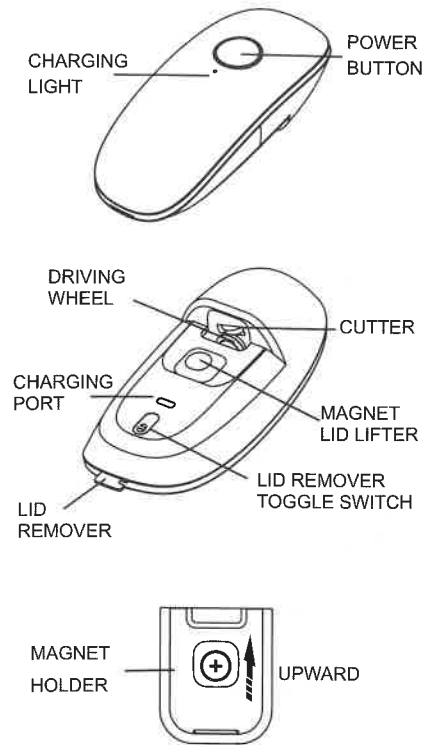

P2

OPERATIONS

■ Charging the can opener

- Please fully charge the can opener according to the charging instructions before use.
- It takes 5 hours to fully charge the battery.
- The can opener can not be started during the charging process.

Indicator Light:

- Low battery Light up red when cutting
- Charging Process Flash in red
- Fully Charged Light up blue

■ Storage


- Remove the sticker backing, and put the magnetic holder on the wall. Store the can opener on the magnetic holder after use.

■ Open Cans

- There is a knurled wheel to catch the inside rim and a cutting wheel that cuts from the side of the can. Before starting the can opener, you can see there is a space between the knurled wheel and the cutting wheel. That allows the opener to be placed on the can.
- When the on/off button is pressed, the knurled wheel will get close to the can rim and grab it. And it starts the cutting process, and the can opener rotates all around the rim.
- When it finishes cutting, the knurled wheel retracts and the opener will automatically stop. You may then remove the opener and the lid.


STEP 1

Correctly place the can opener on top of the can, making sure that the can rim is in between the knurled wheel and cutting wheel.

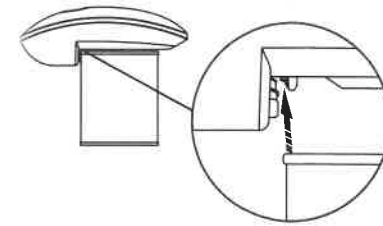

STEP 2

Press the on/off button, and allow the can opener rotate all around the can rim.

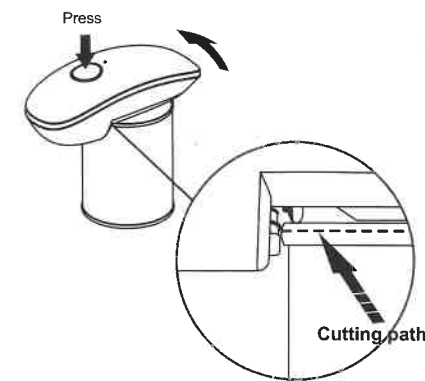


P4

Designed by **Canslab**


STEP 3

 The opener will automatically stop when it has finished cutting. Lift the can opener and remove the lid after the opener completely stop. If the opener does not stop after one rotation, press the on/off button again to manually stop it.

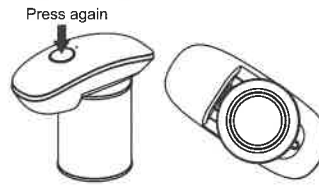

STEP 4

For some cans which are sealed with sticky gel, or with relatively high pressure inside, it could be hard to remove the lid with the magnet. Please switch out the included retractable lid remover to take the lid off.

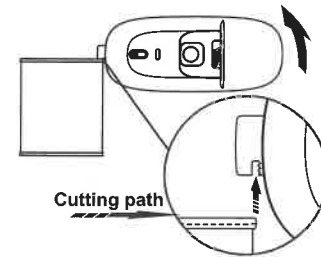

NOTES:

- Allowing only one rotation prevents metal slivers.
- When the motor sound shifts to a higher pitch, the can is open.

P5

BATTERY REMOVAL

1. Please use and store the device under the room temperature from 0°C to 40°C.
2. If the can opener is not in use for more than 6 months, please fully charge it according to the charging instructions before using it.
3. The charging speed may become slower than normal condition when the room temperature is lower than 10°. It is a normal phenomenon, please do not worry.
4. Please charge the device when it is in low battery situation. Do not expose the appliance or battery to excessive temperatures.

Removal:

1. Remove the data plate on the rear cover. Use a small screwdriver to remove the screws under the data plate. Pry the rear cover off.
2. Remove screw securing batteries. Pull off terminal connectors to remove batteries.



P6

SPECIFICATIONS

Working temperature: 0-50 °C

Working voltage: DC 3.7V

Input voltage: DC 5.0V

Rated power: 10W

USER MAINTENANCE

- Do not dispose of can opener in fire they might explode.
- Store in a dry place.
- Clean with a damp towel.
- Do not submerge in water, wash under running water, or wash in dishwasher.

AFTER SALES SERVICE

- 1-year warranty starts from the date of purchase.
- Within the warranty period, any defect arising from materials or product process, we will replace the parts or the whole product depending on the condition.

GET IN TOUCH WITH US

✉ service@canslabstore.com
☎ 626-885-0181

P7

TROUBLESHOOTING

1.The can opener cuts around the can rim, but does not cut it through?

- Please make sure you correctly latch it onto the cans, by placing the can rims in between the knurled wheel and the cutting wheel.
- This can opener can not open cans with curved body, such as soda can or beer can. You may try to open the can from the other side.

2.Why is it rotating so slowly? It looks like it's struggling.

The batteries might be drained already. Please recharge it and try again.

3.The motor is running, however the can opener does not rotate around can.

Make sure you correctly latch it onto the cans. Check the can for any dents or bends on the edges. And try to start the can opener in a new position.

4.Why can't the small magnet keep the lid in place?

Some cans are sealed with sticky gel, or with relatively high pressure inside, which makes it hard to remove the lid. Please switch out the included retractable lid remover to take the lid off.

5.The can opener stop in the middle of the track, and the light is flashing alternately in red and blue?

Please remove the can opener from the can, and restart it at a uncut new position top of the can.

P8