

Elite Gourmet

ELECTRIC SINGLE FLAT BURNER

MODEL: ESB-301BF#/ESB-301F

INSTRUCTION MANUAL

Before operating your new appliance, please read all instructions carefully and keep for future reference.



Questions? Elite's customer service team is ready to help.
For more Elite products, visit us at shopelitegourmet.com.

IMPORTANT SAFEGUARDS

The Elite Brand takes consumer safety very seriously. Products are designed and manufactured with our valued consumers' safety in mind. Additionally, we ask that you exercise a level of caution when using any electrical appliance by following all instructions and important safeguards.

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

WARNING: When using electrical appliances, basic safety precautions should always be followed as below:

1. Read all instructions carefully before using any appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or any other liquid.
4. It is not recommended that children operate this appliance.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts and before cleaning.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, turn any control to OFF position, then remove plug from wall outlet.
12. Oversized foods or metal utensils must not be inserted in the appliance as they may cause a fire or risk of electrical shock.
13. A fire may occur if the appliance is covered or touching flammable material including curtains, draperies, walls and the like when in operation.
14. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electrical shock.
15. Do not place any of the following materials on the unit: Paper, cardboard, plastic and the like.
16. Some countertop and table surfaces, such as Corian®, wood and/or laminates, are not designed to withstand prolonged heat generated by certain appliances. It is recommended by countertop manufacturers that a hot pad or trivet be placed under your appliance to prevent possible damage to the surface.
17. **CAUTION: DO NOT IMMERSE IN WATER.**

SHORT CORD PURPOSE

Note: A short power cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a long cord.

Longer power-supply cords or extension cords may be used if care is exercised in their use.

If an extension cord is used: (1) the marked electrical rating of the extension cord should be at least as great as the electrical rating of the product; (2) the extension cord should be arranged so that it will not drape over the counter top or tabletop where it can unintentionally be pulled on or tripped over by children or pets.

POLARIZED PLUG

 
If this appliance is equipped with a *polarized plug* (one blade is wider than the other), please follow the below instructions:

To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If you are unable to fit the plug into the electrical outlet, try reversing the plug.

If the plug still does not fit, contact a qualified electrician. Never use the plug with an extension cord unless the plug can be fully inserted into the extension cord. Do not alter the plug of the product or any extension cord being used with this product. Do not attempt to defeat the safety purpose of the polarized plug.

**SAVE THESE INSTRUCTIONS.
THIS PRODUCT IS FOR
HOUSEHOLD USE ONLY.**

PARTS IDENTIFICATION

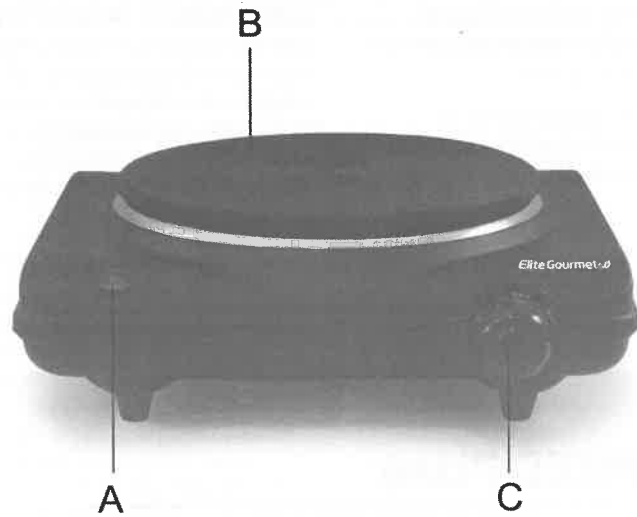

- A. **Indicator Light:** The indicator lights illuminate when the unit is turned on.
- B. **Heating Element:** Iron die cast flat heating surface.
- C. **Temperature Control Knob:** The temperature control knob allows you to adjust the temperature with OFF, 1, 2, 3, 4, 5, and MAX settings.

BEFORE FIRST USE

1. Unpack contents. Remove any packaging material such as plastic, cardboard, or Styrofoam.
2. Use a damp cloth to clean the exterior of the base and heating elements. (Figure 1)
CAUTION: NEVER immerse the base in water or any other liquid
3. The initial use of the appliance may produce a slight smell and smoke. This is normal and harmless and it comes from the burning of the protective substance applied to the heating elements during manufacturing.

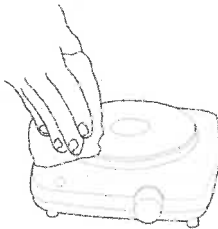 


Figure 1

The smoke and odor should go away with subsequent use of the appliance. It is also recommended to run the unit for 15 minutes on the 1 setting to eliminate the odor and smoke before using it for the first time.

HOW TO USE

1. Before plugging in your new burner, check to see that the electric circuit is not overloaded with other appliances. This unit should always be operated on a separate 120Volt AC outlet.
2. Be certain that your unit is set on a leveled, flat, heat resistant surface. Also, avoid using pans that are unstable and easily tipped. (Figure 2)
3. Place pan on heating element.
4. Turn the temperature control knob to the desired heat setting. The power indicator light of the switch will glow indicating that the heating element is turned on and heating will begin immediately.
5. When cooking is complete, turn the temperature control knob back to the "OFF" position.
6. If the burner is not to be in use for a long period of time, it is highly recommended to unplug the unit from the outlet. This prevents any accidental burns or injury.

 


Figure 2



Figure 3

CLEANING & MAINTENANCE

1. Before cleaning, make sure the unit is off, unplugged from the outlet, and that it has cooled down completely, to avoid personal injury.
2. Wipe off the base and heating element with a damp cloth.
3. Thoroughly clean and dry all parts.
4. **DO NOT USE ANY ABRASIVE SOAPS, DETERGENTS, OR CLEANING MATERIALS TO CLEAN THE BURNER.**
5. Any other servicing not recommended by the manufacturer may cause hazards and should be performed by an authorized representative.



Figure 4



CAUTION:

NEVER touch the heating elements while the burner is in operation. Doing so will lead to serious personal injury. (Figure 3)



CAUTION:

NEVER immerse the base in water or any other liquid. (Figure 4)

LIMITED WARRANTY* ONE (1) YEAR
WARRANTY IS ONLY VALID WITH A DATED PROOF OF PURCHASE

PLEASE DO NOT RETURN TO STORE OF PURCHASE.

If you have any problems with this unit, contact Customer Service for support.

1. Your small kitchen appliance is warranted to the original purchaser to be free from any manufacturing defects under normal use and conditions for one (1) year, cord excluded. This Warranty applies only to the original purchaser of this product.
2. Retail stores/merchants selling this product do not have the right to alter, modify, or in any way revise the terms and conditions of the warranty.
3. If you use your appliance for household use and according to instructions, it should give you years of satisfactory service.
4. At its sole discretion, Maxi-Matic USA will either repair or replace the product found to be defective during the warranty period.
5. The repaired or replacement product will be in warranty for the remaining balance of the one-year warranty period and an additional one-month period.
6. Consumer's remorse is not an acceptable reason to return a product to our Service Center.
7. This limited warranty covers appliances purchased and used within the 50 U.S. states plus the District of Columbia and does NOT cover normal wear of parts or:
 - Damages caused by unreasonable use, neglect, normal wear and tear, commercial use, improper assembly or installation of product.
 - Damages caused in shipping.
 - Damages caused by replacement or resetting of house fuses or circuit breakers.
 - Defects other than manufacturing defects.
 - Breakage caused by misuse, abuse, accident, alteration, lack of proper care and maintenance, or incorrect current or voltage.
 - Lost or missing parts of the product. Parts will need to be purchased separately.
 - Damages of parts that are not electrical; i.e. cracked or broken plastic/glass, scratched/dented inner pots.
 - Damage from service or repair by unauthorized personnel.
 - Extended warranties purchased via a separate company or reseller.
 - Acts of nature such as fire, floods, hurricanes, tornadoes, etc.
8. **This warranty does not apply to re-manufactured merchandise.**

Maxi-Matic, USA shall not be liable for any incidental or consequential damages caused by the breach of any express or implied warranty. Apart from the extent prohibited by applicable law, any implied warranty of merchantability or fitness for a particular purpose is limited in time to the duration of the warranty.

*One Year Limited Warranty valid only in the 50 U.S. states plus the District of Columbia, excluding Puerto Rico and the Virgin Islands.

This warranty is effective only if the product is purchased and operated in the USA; product usage which is in violation of the written instructions provided with the unit will void this warranty. For international warranty, please contact the local distributor.

This warranty gives you special legal rights and you may also have other rights to which you are entitled which may vary by state, province, and/or jurisdiction.

**Any instruction or policy included in this manual may be subject to change at any time.

MAXI-MATIC, USA

18401 E. Arenth Ave. City of Industry, CA 91748

Visit: shopelitegourmet.com to contact us for support