

## BATTERY GAUGE

We recommend recharging when you see just one bar remaining on the battery gauge. After charging the battery gauge will show 3 bars.

## BATTERY RECHARGING INSTRUCTIONS

Turn tuner off during charging using oval button on the front of tuner. Insert small end of the USB cable (included) into the charging port on the back of tuner. Connect large end of USB cable to a reliable USB power supply (not included).

While charging, each bar of the battery icon will flash in sequence as the battery charge is restored. When all 3 bars stop flashing, the charge is complete. Remove cable from tuner and from the USB power supply.

Note: The battery is rated for 300 recharges. After 300 recharges, the battery may recharge to slightly less than its full capacity. We recommend not charging tuner every day, better to charge it once a week.

But if you have a day of heavy use, of course charge it again as needed.

If you do not use the tuner for an extended period of time, you should recharge the tuner every three months to prolong the life of the rechargeable battery.

## CAUTIONS

The battery is not user replaceable. It is not safe to open the back of tuner, so please do not attempt to do that.

Although it is unlikely, if you notice a strong odor during charging, stop charging, turn unit off and contact Snark customer service at: [michelle@snarktuners.com](mailto:michelle@snarktuners.com)

Do not leave the tuner in direct sunlight or in hot car. Do not expose the tuner to liquids. Keep the tuner out of the reach of children.

## RECYCLING OF OLD TUNERS

Please do not discard an old tuner into normal waste bin. Instead please use electronic waste recycling for disposal. Thank you.

This product complies with FCC Part 15 rules. Operation of this product is permitted in USA provided this product does not cause harmful interference and provided this product accepts interference from other devices, even if that interference is detrimental to performance of this product.

Gibson is a registered trademark of Gibson Guitar Corp and is not affiliated with Snark.

EEC Agent: John Hornby  
Skewes & Co., Ltd.  
Salem House, Parkinson  
Approach, Garforth,  
Leeds LS25 2HR UK



## LIMITED WARRANTY

This product is warranted to the original purchaser to be free from defects in material and workmanship that effect product performance for a period of 12 months from the date of original purchase, provided this warranty card is filled out and mailed within 10 days of the date of purchase or you provide proof of purchase at the time of requesting warranty service. In the event of a covered defect we will, at our option, repair or replace the defective product with a new or reconditioned product or refund the product's original purchase price, provided the defective product is returned beforehand postage and insurance prepaid to Evets Corporation at the address below. The replacement product is warranted for the balance of the existing warranty. This warranty does not cover batteries, casings, or damage caused by accident or misuse. THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY APPLICABLE TO THIS PRODUCT. THERE IS NO OTHER EXPRESS WARRANTY. NO ONE IS AUTHORIZED TO MODIFY OR EXPAND THIS LIMITED WARRANTY. THE ABSOLUTE LIMIT OF EVETS' LIABILITY IS THE ORIGINAL PURCHASE PRICE OF THE PRODUCT. ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS EXPRESS WARRANTY. THIS LIMITED WARRANTY IS THE PURCHASER'S EXCLUSIVE REMEDY AND LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES UNDER ANY AND ALL WARRANTIES IS EXCLUDED TO THE EXTENT PERMITTED BY LAW. Warranty valid only in the USA. This warranty gives you specific legal rights. You may also have other rights which vary from state to state – check your own state law for additional rights. Please retain a copy of this warranty and your sales receipt.

Evets Corporation  
P.O. Box 54610, Irvine, CA 92619 USA  
Fax: (949) 716-4175 [www.snarktuners.com](http://www.snarktuners.com)

THANKS FOR  
CHOOSING  
**SNARK®**  
RECHARGEABLE



- SN-5X RE (Guitar, Bass & Violin)
- SN-6X RE (Ukulele)

## TUNER INSTRUCTIONS

Both SN-5X RE and SN-6X RE tuners are chromatic, and both tuners sense the vibrations of the instrument they are attached to.

DO NOT OPEN TUNER ENCLOSURE.  
NO USER REPLACEABLE BATTERY. SEE HOW TO CHARGE

DO NOT USE ON ANY GIBSON® GUITAR OR GUITAR  
WITH NITROCELLULOSE FINISH.  
SEE FINISHES WARNING

# SNARK

## CAUTION: INSTRUMENT FINISHES. READ THIS BEFORE USING THE SNARK TUNER.

We recommend you remove the Snark tuner from your instrument as soon as you finish tuning. SNARK advises NOT to use its tuner with any instruments having these types of finishes: Nitrocellulose Lacquer or Gibson® guitars, unless you accept the risk of dents to the headstock. We recommend using the Snark SN-10 pedal tuner instead of the Snark clip on tuners for these guitars and finishes.

Please do not leave the Snark attached to your instrument if your instrument will be sitting in direct sunlight.

## ATTACHING THE TUNER TO YOUR INSTRUMENT


Use the clamp to attach the Snark to your instrument. Take care to avoid damaging the finish

of your instrument. Do not attach the tuner to your instrument if any of the rubber pads are broken or missing.

Attach the clamp to the headstock (placing the body of the tuner either in front of or behind the headstock).

After attaching the tuner to your instrument, adjust the "banana" shaped arm that connects the tuner to the clamp for optimum viewing of the tuner display. Also, the tuner body rotates 360 degrees so the display can be placed right where you want it.

**TUNING TIP:** Before tuning a string, cover all the strings with one extended finger to damp the vibrations. Remove finger. Then strike the string you want to tune. Then damp again. Then strike the next string you want to tune. Damping the strings before tuning gives you a faster and more accurate result.

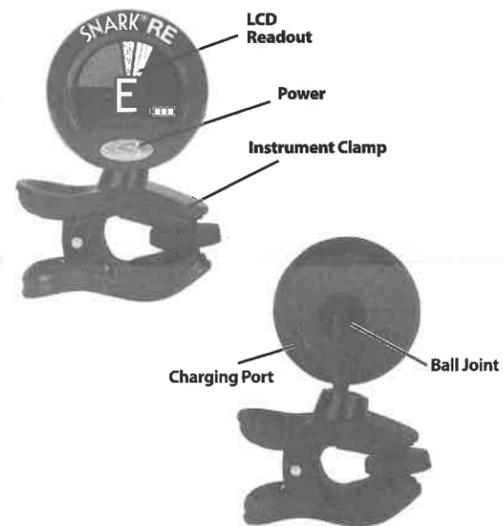

## POWER UP

Once you have attached the Snark to your instrument or music stand, turn it on by pressing the power switch on the face of the tuner.

## TUNING

The Snark is now ready to help you tune your instrument. As soon as you play a note, the Snark's color display will indicate the note you are playing and how close to pitch you are. The left side of the display (red) indicates flat, the right of the display (yellow) indicates sharp.

If only red needles are lit, it means the note played is flat. If any yellow needles are lit, it means the note played is sharp.

You are in tune if the green needle (at center of meter) is lit, but no yellow needles are lit.

As the Snark is chromatic, you can easily deal with non-standard tunings. The Snark will read any note you play.