


Handheld Fan

Instructions

Please read this manual carefully before use, strictly follow the instructions for correct use, and keep the manual properly for future use.

Appearance Description

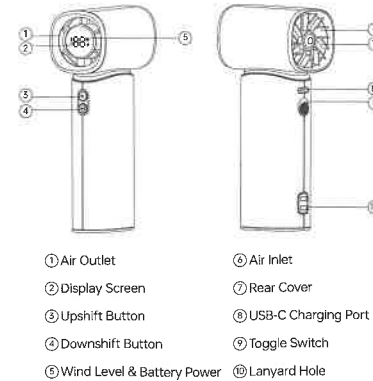

Precautions before use

1. Please check whether the product and power cord are damaged, confirm that they are intact, and assemble them according to the instructions before powering them on for use.
2. Before charging the product, please check if the voltage of the power supply used is consistent with the product label.
3. Do not disassemble, modify, or repair without authorization to avoid accidents such as electric shock and fire. Please inquire at the service station designated by the original seller or manufacturer when repairing.

Usage

A. Power On/Off and Wind Speed Switching

Toggle Switch

Toggle up to turn power on and down to turn power off.

Wind speed adjustment

+ Upshift Button: short press once to increase wind speed by 20 steps, press 5 times in a row to quickly go from 1 step to 100 steps. Long press to increase the wind speed steplessly.


- Downshift Button: short press once to reduce the wind speed by 20 gears, press 5 times to quickly go from 100 gears to 1 gear. Long press steplessly reduces the wind speed.

Warm tips:

1. Before using the handheld fan, turn the toggle switch up to make sure the fan is energized.

2. When storing the fan, the toggle switch must be turned to the off position to keep the fan in the off state to avoid accidental startup.

B. Display screen status description

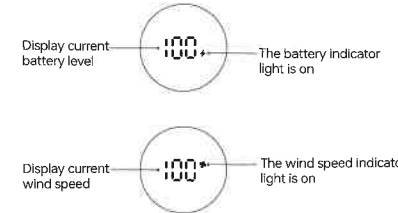

Operation/Status	Display screen shows content
Power on	Display current battery level, jump to display wind speed gear after 5 seconds, default to gear 1
Adjust wind speed	Display the current wind speed and keep it constantly on. When charging, jump back to the charging display state.
Power display	When turned on, it displays the current battery level, and after 5 seconds, it switches to displaying the wind speed gear. And keep it constantly on. When adjusting speed, display the current wind speed. Press the key to adjust to the maximum wind speed, press the key again to display the current battery level, or press the key to adjust. After reaching the minimum wind speed, press the key again to display the current battery level. After 5 seconds, the wind speed gear will be displayed and kept constantly on.
Unable to start due to power shortage	Turn on the switch, the battery level displays 0, the battery level icon flashes 3 times, and then the screen is turned off.
Low battery reminder	When the battery level is ≤ 10, the battery level icon flashes continuously.
Charge	The individual digits of the battery level continue to fluctuate.
Fully charged	The battery level remains on at 100, disconnect the charging power, and turn off after 10 seconds.

C. Product cleaning

1. Before cleaning the product, please ensure that the power has been cut off.
2. The product face mask cannot be removed. When cleaning, a clean cloth can be used to wipe the surface of the fan and the air intake grille.
3. It is prohibited to clean electrical parts (such as motors, power switches, etc.) with water or other liquids.
4. Do not touch the power supply and electrical components with wet hands or cloths.

Product parameters

Product model: K100
Product name: Handheld Fan
Rated voltage and current: 5.0V=2.5A
Product weight: 173g
Charging time: 3.5hours
Working hours: 3-16 hours
(depending on different gears/usage scenarios)
Product size: 26 * 46 * 129mm
Execution standards: GB4706.1-2005 GB4706.27-2008

Packaging accessories

Handheld turbo fan * 1
USB A to USB-C charging cable * 1
Hanging rope * 1
Instruction manual * 1



The content of this manual and the technical specifications of the product are subject to change without prior notice

Dear Valued Customer:

We sincerely appreciate your support and trust in our products. Manufactured under strict quality control and inspection, our products meet international standards and are appreciated all over the world. We will continue to strive for excellence and provide better products.

If you have any questions or dissatisfaction with the product, we really appreciate you contacting us, we will respond within 24 hours and resolve any issues promptly.



Email: ServiceTeam356@outlook.com

Thank you for taking the time to read this!

Best Wishes.