 



Inserting Paper Cassette

1. Open the cassette cover.
2. Insert the paper facing the shiny side up. You can insert up to 20 sheets. Inserting over 21 sheets may cause a malfunction. Avoid touching the coated paper with your hands as it may affect the photo quality.
3. Open the printer's cassette cover.
4. Insert the cassette until it clicks into place.

Installation

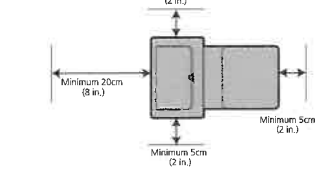

 Inserting cartridge



1) Turn on the printer by pressing the power button on the top left corner. Turn BLUETOOTH on in your smartphone.

2) Go to BLUETOOTH setting in your smart phone and find "KODAK iastar-XXXX". Printer name (XXXX) are variable 4 characters.

* You can find printer name on the bottom label

Consumables (included)



3. Press down and pull out the lever to exchange used cartridges.

What's in Box



APP Download

 
Search for "KODAK Photo Printer" Install the application.

KODAK Photo Printer

Download on the Google play

Download on the App Store

Bluetooth Connection



Docking Connection

- 1) Connect your smartphone to docking station on the top of the printer

Printing in the App

- 1.
- 2.
- 3.
- 4.

1. KODAK Photo Printer app launch
2. Choose Photo
3. Select Print Number
4. Select Printer Icon

*Select SNS if you want to print the photo from it.

Power and LED status indicators

Status	LED
Power on	White LED
Power off (2 seconds)	None
Printing	White LED blinking
Firmware Update	Red LED blinking
No cartridge/Removing cartridge	Red LED blinking for 10 seconds then White LED
No cassette/Removing cassette	Red LED blinking for 10 seconds then White LED
No Paper	Red LED blinking for 10 seconds then White LED
Error (Paper jam, etc)	Red LED blinking for 10 seconds then White LED
Loading / Cooling	White LED

Troubleshoot

Indication	Solution
Paper jam	- Turn the printer off and on. The printer will automatically eject the paper. If problem is not solved, please contact Customer Support.
Low resolution	- The resolution of the original photo may affect print quality. We recommend photo with 1280x2448 pixels and above.
Printer not printing	- Turn the printer off and on. - Check if the cartridge is inserted properly. - The printer will not print once it reaches a certain temperature. - This is not a malfunction. Please wait until the printer cools down.

Safety Precautions

- Denotes the possibility of serious injury or death
- Use only recommended power sources.
 - Do not attempt to disassemble, alter, or apply heat to the product.
 - Avoid dropping or subjecting the product to severe impacts.
 - Do not touch the interior of the product if it has been dropped or otherwise damaged.
 - Do not use, place, or store the product in the following places:
 - Places with direct sunlight, places with a temperature higher than 40 °C (104 °F), places with high humidity or dust, and places with strong vibrations.
 - Do not allow liquids or foreign objects to enter the product.
 - Stop using the product immediately if it emits smoke, a strange smell, or otherwise behaves abnormally.
 - Do not use organic solvents such as alcohol, benzene, or thinner to clean the product.
 - Do not let the product come into contact with water or other liquids.
 - Do not handle the power cord with wet hands.
 - Keep the printer in a safe area to avoid people from tripping over the power cord.
 - Keep out of reach of children.