 
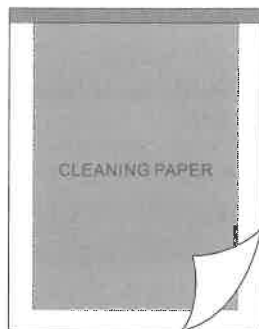 


Warranty & service

Thank you for choosing our laminator. We aim to supply quality machines that create excellent results.

Never fix the product yourself. The appliance is guaranteed for 12 months from date of purchase, subject to normal use. If the laminator is under warranty then return it to the place of purchase for replacement after service.

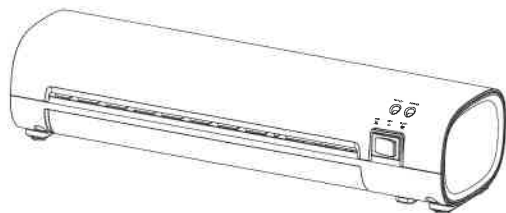

◆ Usage Note

After 10 minutes of heat molding, when laminating a 3mil plastic film, you need to use a piece of cleaning paper to clean it once in advance.


Important safety instructions

Before operating the laminator – please read and keep the user instructions for reference.


When using electrical appliances, basic precautions should always be followed to reduce risk of injury or electric shock, including the following:

1. Always unplug the appliance when not in use.
2. This appliance is not intended for use by persons, with reduced physical, sensory or mental capabilities or lack of experience or knowledge. They should be given supervision and instruction in the use of the appliance, by a person responsible for their safety. The laminator will become very hot in use and care should be taken when handling the machine.
3. Protect against the risk of electrical hazards. Do not immerse the power cord, plug or appliance in water or other liquids, or use near water.
4. Do not insert any metal objects or other foreign objects such as jewellery, hair, fingers or clothing into the appliance.
5. Remove paper clips and staples before laminating.
6. Do not operate the appliance with a damaged plug or power cord or after the appliance has malfunctioned or become damaged in some manner.
7. If the Power Cord is damaged, it must be replaced by a qualified Engineer in order to avoid a hazard.
8. The appliance should be installed near the outlet socket and the socket should be easily accessible.
9. Only laminate paper or board. Do not laminate unusual objects.
10. Pls don't put hands in the entrance and outlet and don't push the film by hand
11. Do not spray anything into or lubricate the appliance.


Component name

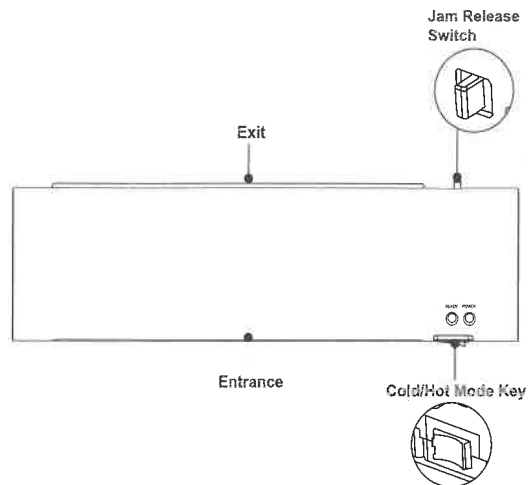


OPTIONAL COMBO

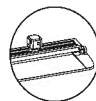

Paper cutter

 

Corner rounder

 

Laminator pouches



Use of the laminating film

- ◆ Please select the correct size of the coated laminating film accordingly the document. Only use film bags of the correct size (max.A4 and below), Thickness (max 125mic), (min 80mic), Too thin foil pockets can cause a blockage inside of the device.
- ◆ The laminating film has sealed on one side. Open the laminate and place the document to be laminated centrally in the film.
- ◆ Have the laminating film held 2-6mm away from the edge of the laminator.
- ◆ Please put the sealed laminating film side (not the open side) in the Entry to start lamination.

Figure 1

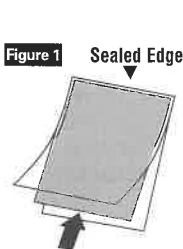 


Figure 3

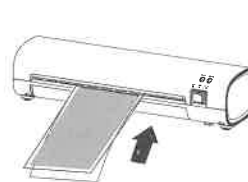 


Figure 2


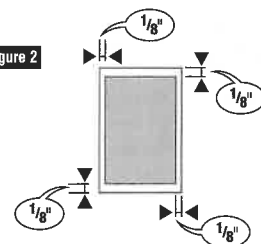


Figure 4

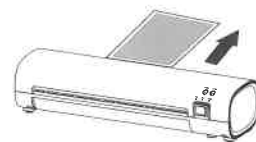

Hot lamination

1. Plug the power cord into an easily accessible standard electrical outlet.
2. Firstly, turn on/off the switch behind the device. Secondly, press the hot and cold mode switch (Hot mode when pressed), when "HOT", the red indicator lights up.
3. The drive motor for the transport rollers starts up. After about 3-4 minutes, the operating temperature is reached and the green indicator lamp lights up.
4. Place the laminated goods in the film bag so that there is a distance of around 2-6mm from the film edge on all sides.
5. Insert the film together with the laminate into the insertion slot of the laminator, the closed side of the film must be inserted first.

Cold lamination

1. Plug the power cord into an easily accessible standard electrical outlet.
2. Turn on/off the switch behind the device: step "COLD"(When the hot and cold mode key is not pressed, it will automatically be in cold mode)
3. The drive motor for the transport rollers starts, the green indicator lamp lights up.
4. Place the laminated goods in the film bag so that there is a distance of about 2-6mm from the film edge on all sides.
5. Insert the film together with the laminate into the insertion slot of the laminator. The closed side of the film must be inserted first.


Notice

If you used the laminator for hot lamination shortly after, you must let the laminator cool down. The cooling time takes up to 15 minutes.

Using the paper cutter

The laminator is equipped with a sharp and safe paper cutter, precise grid lines for effortless cutting. Cut documents, photos, images in any (desired) size.


1. Open the transparent plate, place the document in the paper cutter. Align the position and cover the transparent plate.
2. Fix the transparent plate and document with one hand, with the other hand hold the blade and pull or push it to the end.
3. Please clean the debris in the paper cutter before cutting again.

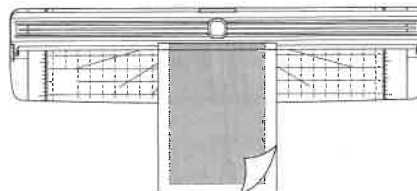

Use of the corner rounder

Evenly rounding the corners of documents, photos, pictures etc.


1. Place the document in the corner filler and promptly push it down. You can take out the document when you hear the sound.
2. After use, you can remove the transparent cover on the bottom and clean crumbs.

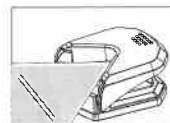

Clear film jam

This laminator is equipped with the "ABS Jam Release" function to be able to quickly fix film jams.

1. If the film is blocked, switch off the device and use the "ABS" lever on the right rear of the device to the left.
2. Hold the laminator firmly and pull the film together with the Laminate from the insertion slot of the laminator.
3. After that, the device will probably have to be repeated several times, as described under "Care and Cleaning", can be cleaned.
4. If the film jams are repeated or if the jam is no longer jammed can be pulled out of the laminator, please contact our hotline

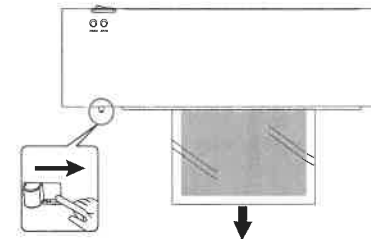

Care and cleaning

Deposits and adhesive residues on the transport rollers can affect the lamination result. Therefore, the transport rollers must be cleaned periodically after use will.

To do this, insert a folded sheet of paper into the insertion slot. The adhesive residue is carried away by the emerging paper. The process several times to repeat, if required, the case can be washed with a mild soap and clear water soaked cloth. Always pull the power plug before cleaning the device with a damp cloth. Do not use solvents or aggressive cleaning agents.

Troubleshooting

Error	Solutions
Device does not respond	<ul style="list-style-type: none"> ◆ If the error is not resolved ,please contact our email.
Film jam	<ul style="list-style-type: none"> ◆ Check the size of the foil pouch used. ◆ Only use foil bags of the specified size. ◆ Make sure that the foil pouch has just been inserted into the device. ◆ To release the jam, follow the instructions under"Clearing the film".
Laminated film is not completely transparent	<ul style="list-style-type: none"> ◆ Laminate the same film again to improve the lamination result. ◆ When using thicker film, please let the device warm up longer.

Specifications

Rollers	2 Roller (hot shoe)
Entry width	230mm
Max lamination thickness	0.5mm
Pouch Thickness	(2X80)160-(2X125) 250mic; US 3-5mil
Laminating speed	280mm/min 50Hz 340mm/min 60Hz
Min pouch size	Credit card size (54x86mm)
Max pouch size	A4 size
Warm-up	3-4min
Voltage	AC220-240V 50/60Hz 280W
	USA AC120V 50/60Hz 300W
	JP\Taiwan AC100V 50/60Hz 300W
Rated current	1.3A, USA 2.6A, JP/Taiwan 3A
Dimensions (LxDxH)	332X103.8X72.5mm
Cutting width of paper cutter	300mm
Rounding corner size	R4mm

Disposal

Please dispose of this product responsibly at approved waste or recycling facilities. Do not dispose of this product in household Waste.

