 


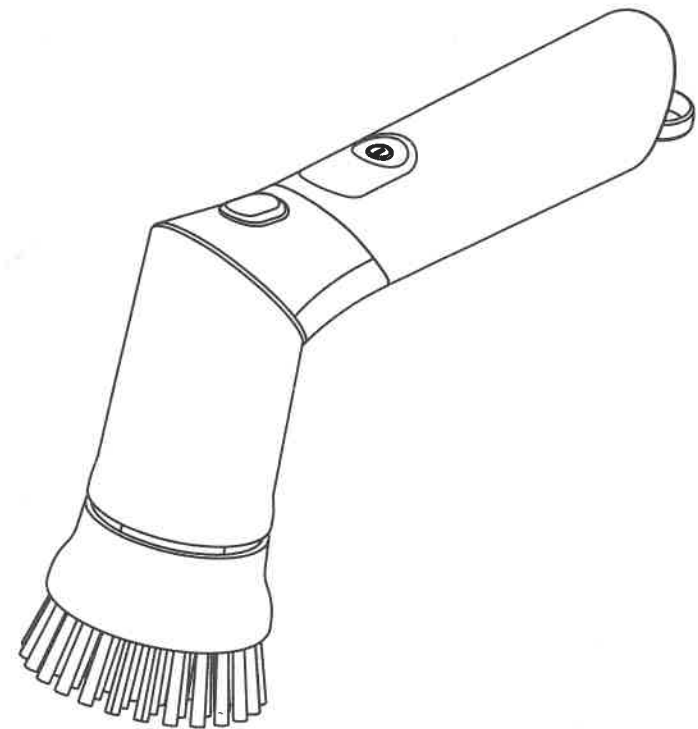



ELECTRIC SPIN SCRUBBER

Model: KS-2633



Thanks a lot for choosing our product! Please read this manual carefully before using and keep it for future reference.

  PARTS INCLUDED

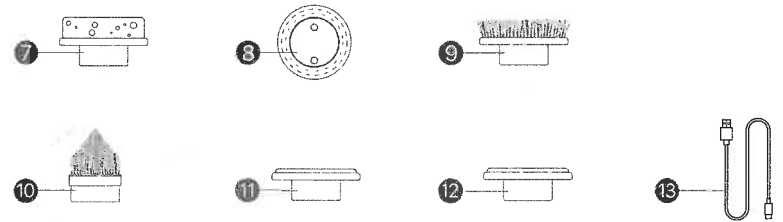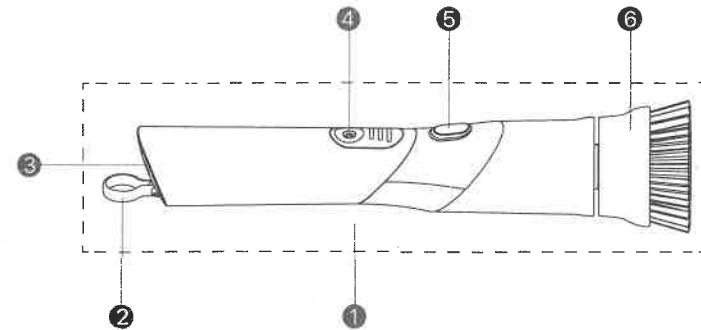


- | | |
|---------------------------|-------------------------|
| 1. Entire Chassis | 8. Velcro |
| 2. Hanging Strap | 9. Large Flat Brush |
| 3. Charging Port | 10. Corner Brush |
| 4. Power Button | 11. Hard Chenille Cloth |
| 5. Angle Adjust Button | 12. Soft Chenille Cloth |
| 6. Replaceable Brush Head | 13. Charging Cable |
| 7. Sponge Brush | |

SPECIFICATIONS


Battery Type:	Li-ion Battery
Battery Capacity:	2500mAh
Battery Quantity:	1 Batteries
Voltage:	3.7V
Input:	100-240V~, 50/60Hz
Charge:	5V---1A
Charging Time:	3-4 Hours
Running Time:	90 Minutes
Rotating Speed:	300RPM/400RPM

 How to adjust the angle of the extension handle:
You can adjust the angle by pressing the button on the handle.

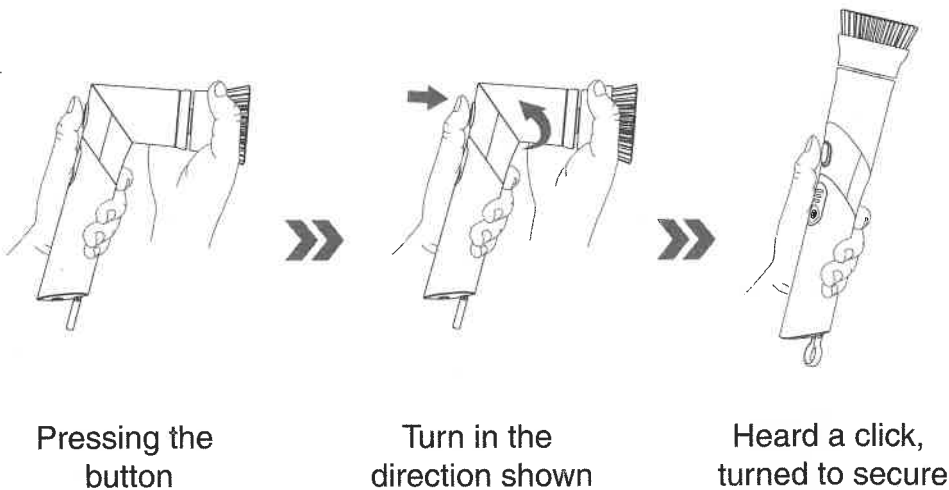


Brush Head Assembly

 Firmly hold the Scrubber Head with one hand and then press the selected brush on until secured.

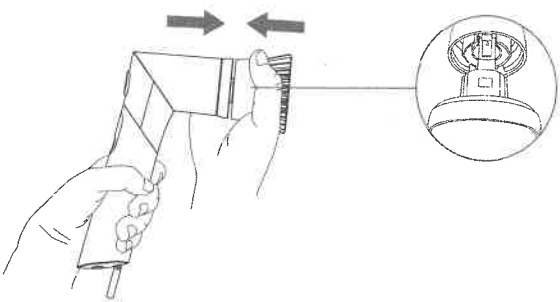

How to pull out the brush head

 Hold the connection part of the brush head and pull out vertically.

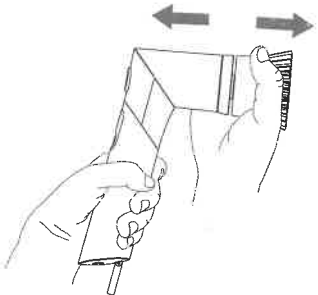

CHARGING INSTRUCTIONS

In order to extend the battery life, please avoid consecutive charging exceed 12 hours. It is not necessary to wait until battery power is fully depleted before recharging.

Make sure turn off the machine before charging.

Open "Charging Port Cover" located on back of machine.

Insert cable end of "Charger" into "Charging Port."

 
The indicator light flashes while charging.

The indicator light stays on after being fully charged.


After charging is complete, close the "charging port cover".

Press the power button to turn on. It starts in low gear by default, and press it again for high gear.


Power indicator: when discharging, power on the display, more than 70% power shows all light; 30-70% power shows 2 lights; 10-30% shows 1 light; 10% below and the last power light flash every second; finally, the light will flash quickly for 30seconds before going out.

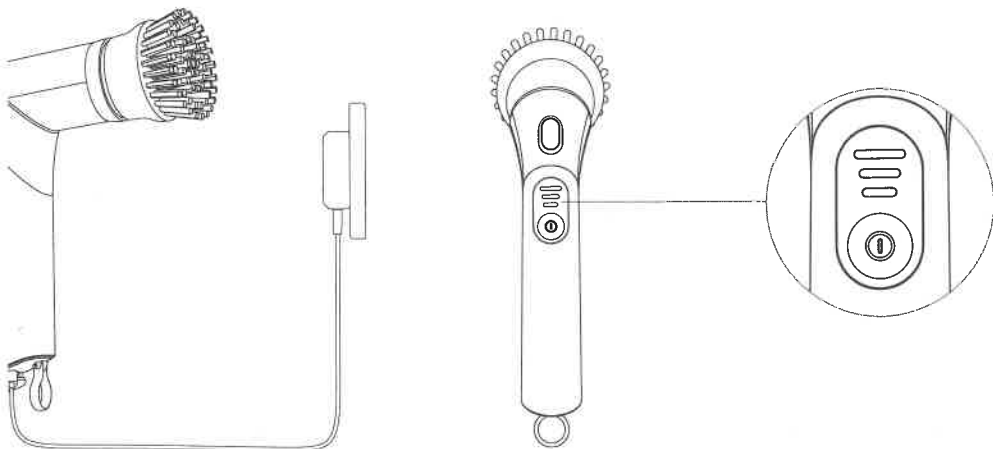


SUGGESTION FOR USE OF ACCESSORIES

 

 Large Flat Brush: The Large Flat Brush is used to clean large flat surface area, like hard floor, tile, wall, door, window, glass, counter, patio furniture, pool, soap scum, grim, stove, carpet and ceramic.



 Corner Brush: The Corner Brush is great for cleaning tile grout, edges, corners, cranny and tight places.



Cloth Brush : The Cloth Brush for wooden floor and furniture cleaning.

 


sponge brush: The sponge brush is used for cleaning kitchen stoves, car windows, windows, and stainless steel surfaces.

HOW TO CLEAN THE PRODUCT

Handle Part: Gently wipe the handle part of the scrubber with a wrung soft cloth.

Brush Head: Disassemble the brush head and immerse it into the water to clean. Use a neutral detergent if it is difficult to clean.

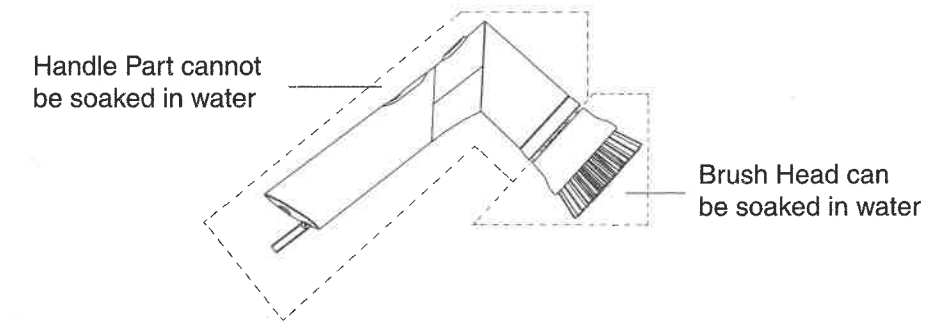

CLEANING TIPS

- a. For better cleaning effect, it is recommended to use the brush with detergent (such as Mold & Mildew Remover, Water Strain Remover, Oven Cleaner, Bleach Cleaner, All Purpose Cleaner). You could use different detergents for different needs.
- b. For removing stubborn stains, please soak stains into water and detergent for a while, and then use the scrubber to clean, it will shorten your cleaning time.

STORAGE

Storage Suggestions: Store the scrubber in a well-ventilated and shaded area. Avoid placing it in a wet place or being exposed to strong sunlight.

FAQ

1. Why does the brush head stop rotating during operation?

- A. If the LED screen shows a blinking green light, it means that the brush head has triggered a protection mechanism due to excessive pressure. This protects the motor from damage, resulting in the rotation of the brush head being stopped.
- B. You can check the remaining battery level through the LED screen.
- C. If the above conditions are not met and the product stops rotating and cannot be restarted, please contact us through the after-sales email for assistance.
- D. When stopped due to pressure, the indicator light flashes and then goes off. To restart and use again, press the power button.

2. Why does the brush head spin is less than 90 minutes or isn't work after pressing ON/OFF button twice even when the battery is fully charged?

Each user will use different downforce during use. If you keep pressing the brush head too hard, the working time will be less than 90 mins. In order to prolong the use time, please don't press the brush head too hard, and by frequently press it too hard will break the brush head.

WARM TIPS

1. Please check whether there are any missing parts after receiving the product
2. Allow for transportation safety; the product you obtained is not fully charged. Please fully charge the product before use
3. Before using the scrubber, be careful not to get splashing stains into your eyes or on your skin.
4. When the battery is low, please charge the product in time.
5. Please close the cover after charging to avoid water from entering as it may cause short circuit.
6. Please make sure that the scrubber is well assembled before use.
7. Small scratches may occur when cleaning the surface of stainless steel, polished resin, artificial marble, wood, etc., please try to confirm beforehand. Please try it out in a small area and make sure that there are no abnormalities before cleaning.
8. It is recommended to rest the machine after working for 30 minutes.
9. Brushes are consumable which are not applicable to the warranty.
10. Please keep the power cord plug and hands dry to avoid the risk of electric shock
11. Do not disassemble, repair or modify internal parts by yourself, please contact us if you have any quality problems.
12. Always use proper eye protection when using the power scrubber with irritating substances. Rubber gloves are also recommended.
13. When changing accessories, please make sure to turn off the machine first.
14. Keep the hair, cloth or other parts of your body away from brush head to avoid convolving.

SAFETY INSTRUCTIONS

Caution: When using electrical appliances, basic safety precautions should always be followed, including the following:

1. This product is not a toy. Close supervision is required when any appliance is used by or near children. Store it out of reach of children.
2. If the charge cord is damaged, it must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid a hazard.
3. To protect against the risk of electric shock, do not put the battery charger in water or other liquid. Do not charge battery if it is wet or shows signs of corrosion.
4. Do not incinerate the battery. it can explode in a fire.
5. Do not attempt to use this charger with any other product.
6. Do not attempt to charge this product with any other charger.
7. Do not use the charger in wet or damp conditions.
8. For best results, do not charge a battery when it or the air temperature is below 40°F(5°C)or above 105°F(40°C).
9. Do not operate adaptor if it has received a sharp blow, been dropped, or otherwise damaged in any way. Do not disassemble the adaptor for any reason.
10. Do not abuse the cord. Do not carry the charger by the cord or yank the cord to disconnect.
11. Do not store or use the appliance close to high temperatures.