 


TEEVOGO

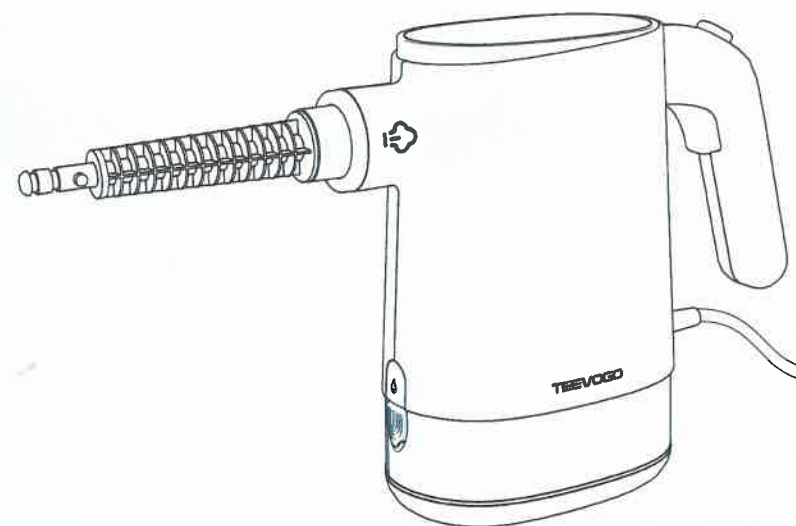

USER MANUAL


TEEVOGO MULTIPURPOSE STEAM CLEANER

HANDHELD STEAM CLEANER FOR HOME
SG-SC201

Important Safety Instructions	3-4	Detaching Accessories	9
Tools Included in Box	5	Recommended Usage Areas	10
Attaching Accessories	6	After-Cleaning Care	11
Touch Screen Guide	7	Storing Your Machine	12
Steam Cleaning	8	Warranty	13

Product Overview

- A: On/off Switch
- B: Low Gear
- C: High Gear
- D: Pause Button
- E: Start Button
- F: Water Tank Lid
- G: Water Tank

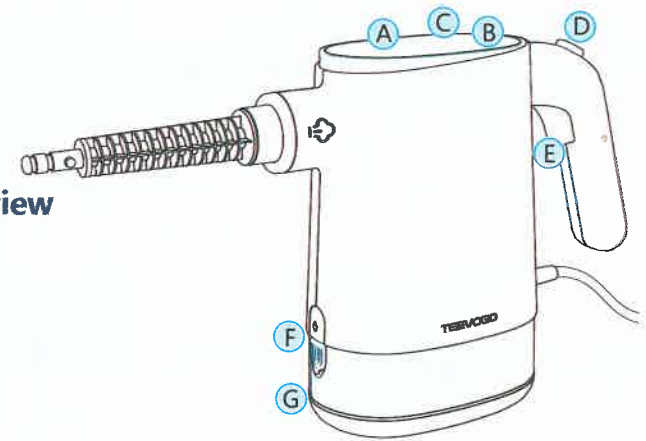


IMPORTANT SAFETY INSTRUCTIONS

WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY:

- Do not leave the appliance unattended when it is plugged in. Unplug from the outlet when not in use and before servicing.
- Do not immerse the appliance in water or other liquids.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.
- Do not use with damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water; do not attempt to operate it and have it repaired at an authorized service center.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep the cord away from heated surfaces.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep openings free of dust, lint, hair, and anything that may reduce air flow.
- Do not turn over the steam-cleaning nozzle, or touch the surface of the nozzle when using the steam-cleaner or its attachments.
- Only use water to refill the reservoir. Do not use any type of chemicals or additives.
- Use only the manufacturer's recommended attachments. The use of attachments not provided or sold by TEEVOGO may cause fire, electric shock, or injury.
- Steam must not be directed toward people, animals, or equipment containing electrical components, such as interior of ovens.
- Do not use on leather, wax-polished furniture or floors, synthetic fabrics, velvet, or other delicate, steam-sensitive materials.

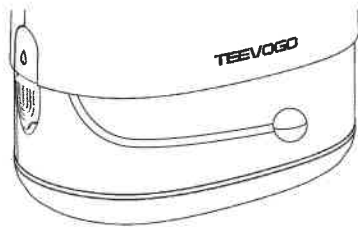

Note: The floating ball inside the water tank allows the device to draw water from the surface level. Its movement and the subtle sound it may produce are inherent to its operation and are completely safe.

SAVE THESE INSTRUCTIONS

THIS MODEL IS FOR HOUSEHOLD USE ONLY.

COMMERCIAL USE OF THIS UNIT VOIDS THE MANUFACTURER'S WARRANTY.

IMPORTANT INFORMATION

- To prevent leaks, do not store the appliance in areas where freezing may occur, as it may damage the internal components.
- Do not turn on your appliance until you are familiar with all instructions and operating procedures.

MODEL	SG-SC201
HEATING TIME	15S
VOLTAGE/FREQUENCY	110-120V,60HZ
STEAM DURATION	30 MINUTES
POWER	1200W
FLOW RATE	30G/MIN
WATER TANK CAPACITY	650ML
STEAM PRESSURE	0.1MPa



Installation Video Guide



Usage Video Guide



PLEASE ENSURE ALL ACCESSORIES ARE SECURELY CONNECTED BEFORE USE.

TOOLS INCLUDED IN BOX



Machine




Accessory Nozzle



Measuring Cup



Funnel

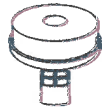


Scouring Pad Brush

Removes tough grease and grime from hard surfaces




Flat Scraping Tool

Scrape and remove tough dried- or baked-on messes

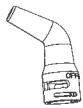

Angle Concentrator Tool

Direct steam at an angle for hard-to-reach areas or surfaces.

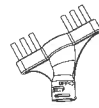


Grout Brush

Concentrated nylon bristles scrub grout lines and other tight, narrow spaces.



Clothes

Pair the cloth and the included squeegee for de-wrinkling and refreshing clothing, fabric, upholstery and more. The cloths are washable and reusable.

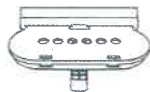

Squeegee

Removes water and streak from glass surfaces. **Can be Separated** and pair with clothes included as a **fabric steamer**.



Round Detail Brush

Nylon bristles scrub tough messes



Extension Hose & Nozzle


Use the connector to attach the extension hose and nozzle, helping you reach distant areas for thorough cleaning.

Attaching Accessories


Attaching Accessory Nozzle and Other Tools



1. Insert the accessory nozzle and twist counterclockwise until fully locked.

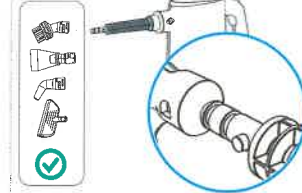


2. Push it in firmly until it is fully seated.

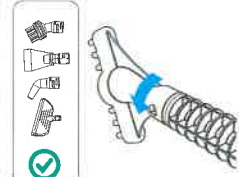


3. Twist clockwise to lock it in place.

Attaching Extension Hose and Other Tools

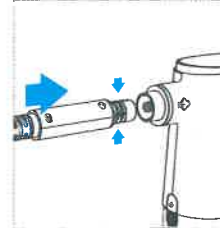

1. Connect the extension hose to the machine and twist clockwise to secure it.

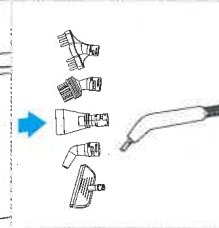


2. Attach the desired tool to the end of the extension nozzle and twist clockwise to lock it in place.

Attaching Squeegee



1. Align with latches.

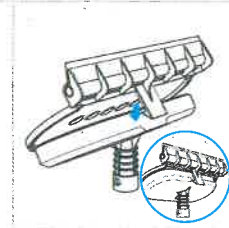


2. Press down until it clicks. (Ensure the squeegee is securely seated)

Attaching Fabric Steamer




1. Attach the cloth to the squeegee.

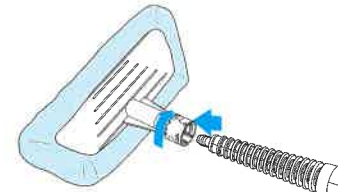

2. Attach the squeegee to the end of the accessory nozzle or extension nozzle.

Touch Screen Guide

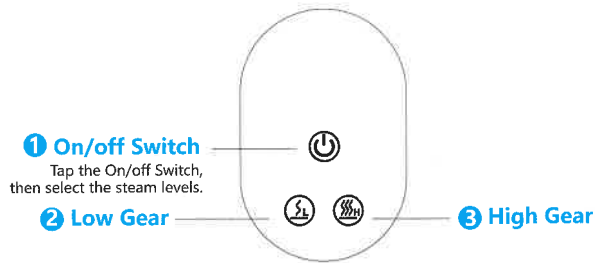


Adjusting Steaming Levels

Tap the desired gear setting on the touch screen.

For a Temporary Stop

Mechanical Switch:

- Press the Start button to start operation.
- Press the Pause button to temporarily Pause the machine.

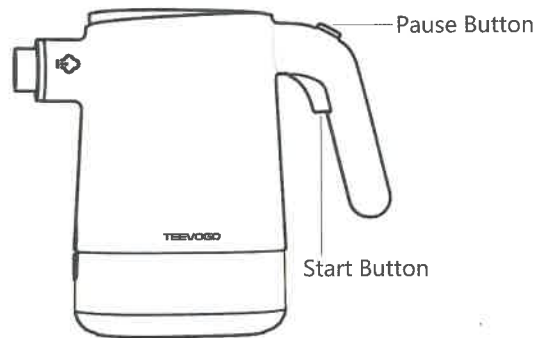

Steam Cleaning

Before using your handheld steam cleaner, please note the following:


- Do not use on porous materials or unsealed hard surfaces.
- Do not use on painted, plastic, or vinyl-covered surfaces; wax-polished furniture or floors; synthetic materials and fabrics; velvet, leather, or other delicate heat- or steam-sensitive materials.
- Test on an inconspicuous area before first use. If the surface is affected, do not use the steam cleaner.
- Thermal shock can shatter glass. Before cleaning cold glass surfaces, warm the area gradually by directing the steam jet from a distance of 4 to 6 inches.

<p>1. (Optional) Attach tools and accessories.</p>	<p>2. Slowly pour 600 ml (20.3 oz) of distilled or purified water into the steamer using a measuring cup and funnel. Do not overfill.</p>	<p>3. Plug the unit into a properly grounded outlet. Plug the unit into a properly grounded outlet and turn on the ON switch.</p>
<p>After 15-20s</p>		<p>less than 3 inch</p>
<p>4. Select a gear setting and wait 15–20 seconds for the unit to heat. When the gear indicator light becomes steady, the steamer is ready for use.</p>	<p>5. Push the Start button to activate, and the upper button to deactivate.</p>	<p>6. For general cleaning, hold the steam nozzle within 3 inches of the surface. Note: Steam cleaning effectiveness decreases if the nozzle is held more than 3 inches from the surface.</p>
<p>HIGH GEAR</p> <p>25 minutes</p>		
<p>7. In high gear mode, the steamer can run continuously for up to 25 minutes. In low gear, it can last up to 30 minutes.</p>	<p>8. Dry-burn protection: The device will not be damaged if it runs out of water during use.</p>	<p>9. After use, press the Pause switch on top to turn off the unit. Wait for a 'click' sound to confirm it's fully off. Do not remove the brush head immediately to avoid burns.</p>

Detaching Accessories


Detaching Tools

Twist counter-clockwise to unlock and detach (the same steps apply to all other small tools).

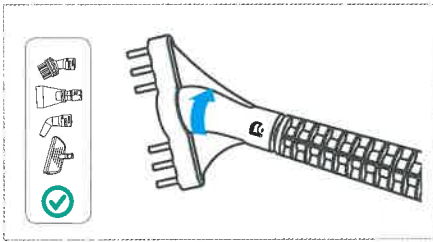


Detaching Extension Nozzle

Twist counter-clockwise to unlock and detach.

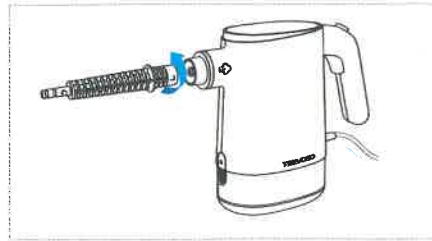


Before Usage

For areas with heavy grease or long-standing dirt buildup, use the steam cleaner in combination with a cleaner. Apply the cleaner to the brush head or spray the cleaner onto the surface. This cleaning method can achieve up to 99% effectiveness. Do not add any cleaner directly into the water tank, and do not add any chemicals into the water tank.

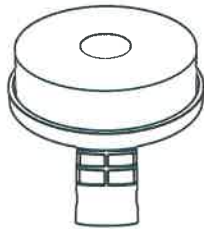


The new scouring pad brush is perfect for kitchen cleaning. Like a kitchen cleaning brush, it easily removes stains and solves the hassle of cleaning stovetops.

Recommended Usage Areas

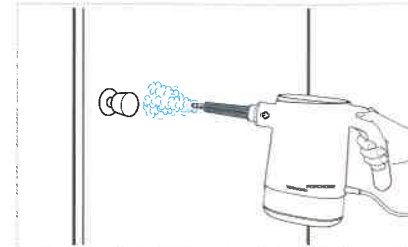


General

Dirt, grime, grease, dried-on or stuck-on messes, golf clubs, wallpaper removal, narrow spaces, tight crevices, old gum, ceiling fans, mattresses, doorknobs, drapes, upholstery, plants, and more.

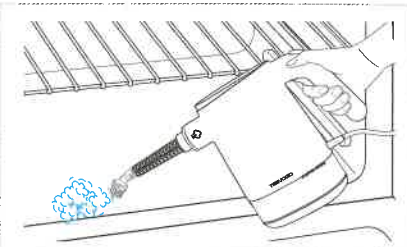


Kitchens

Floor grout, counters, backsplashes, sinks, faucets, ovens, oven hoods, stovetops, microwaves, windows, slider door tracks, and more.

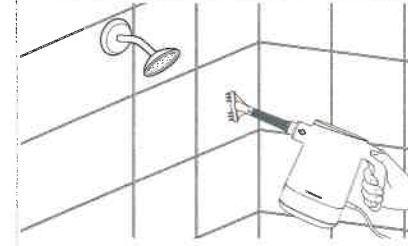


Bathrooms

Floor grout, counters, backsplashes, sinks, faucets, tubs, showers, shower doors, shower caddy, toilet exteriors, and more.

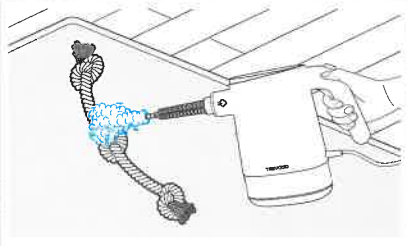

Kids & Pets


Kid and pet toys, sports equipment, pet beds, food and water bowls, pet crates, and more.

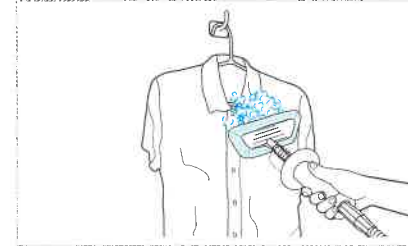

Clothes, Fabric & Upholstery

Clothing, fabric, upholstered surfaces, drapes, curtains, furniture, pillows, mattresses, bedding, car seats, and more.



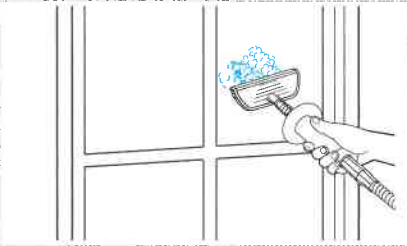



Note: Do not use the steamer on clothes while wearing them to avoid the risk of burns and injury.



Windows, Mirrors, Glass & Smooth Surfaces

Windows, mirrors, shower walls and doors, glass cooktops, kitchen countertops, glass and marble tables, and any other non-porous, solid, flat surfaces in the home.

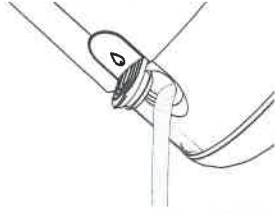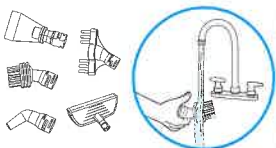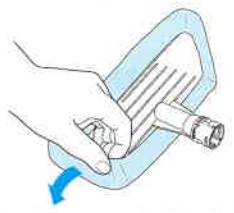After-Cleaning Care

		
<p>1. Steam or pour all water out of the water tank.</p>	<p>2. Remove any tools and accessories. Rinse tools and allow them to dry.</p>	<p>3. If you used the fabric steamer cloth pad, be sure to remove it.</p>
		
<p>4. Hand wash fabric steamer cloth in warm water with liquid detergent. Do not use fabric softeners or bleach. Allow it to air dry.</p>	<p>5. Wipe down machine with soft, damp cloth.</p>	<p>6. To keep things tidy and prevent damage, remember to wrap and store the power cord after each use.</p>

WARNING

To reduce the risk of fire, electric shock or injury, disconnect plug from electrical outlet before performing maintenance or troubleshooting

Storing Your Machine

When finished using the product, store the unit indoors in a dry location where it is not likely to be damaged.

Problem	Possible Cause	Remedies
Reduced steam or no steam	No water in the tank.	Pour 600mL (20.3oz) of distilled water into the steamer. Do not overfill. Refill only with a measuring cup.
	Did not press the steam trigger.	Press the trigger to release steam.
	Mineral deposits from hard water caused a clog in the internal valve.	Mix 8g of citric acid with 600mL of water, then pour it into the product's water tank. Set the steam level to high and begin steaming. The clog cleaning process will end once the water in the tank is used up.
Leaking	Mineral deposits from hard water caused a clog in the internal valve.	Mix 8g of citric acid with 600mL of water, then pour it into the product's water tank. Set the steam level to high and begin steaming. The clog cleaning process will end once the water in the tank is used up.
	Water tank overfilled.	Pour out any excess water directly. The water remains cool at all times, so there's no risk of burns.

Warranty

To activate your **one-year warranty**, please contact us at teevogo@careuservice.com. This warranty applies only to defective or malfunctioning devices and must be requested within one year of purchase.

The warranty excludes routine maintenance components such as accessories (e.g., squeegee, measuring cup, nylon brush) and does not cover damage or malfunction resulting from negligence, abuse, unauthorized repair, or any other misuse not in accordance with the User's Guide.

Need more support?

Reach out to teevogo@careuservice.com for troubleshooting, warranty activation, and more.



INFO



VIDEOS



PARTS



SUPPORT



Installation Video Guide



Usage Video Guide