
Smart Air pump manual

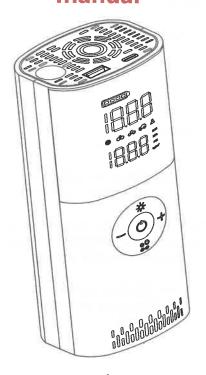

After-sales Email: mxvipservice@outlook.com

Current actual value

Pop Acc Button

LED light switch

"+" key

Replacement

Accessory Box

Instructions for Use

18.88

1888

(O)

USB-A connector

Battery indicator

Paradigm^{*}

" " key

Type-C connector

Switchgear

Setpoint

This smart air pump combines advanced inflation technology with convenient APP control functions, and is precisely adapted to the inflation needs of car

Product Introduction

tires, bicycle tires, balls, inflatable mattresses, etc.

It has both emergency power bank functions and one-button lighting functions when the machine is not turned on.

It is compact and portable, easy to operate, fast to inflate, and intelligently monitored, meeting inflation needs anytime, anywhere.

After-sales Email: mxvipservice@outlook.com

1. Inflation steps



Screw the air hose clockwise.



Connect the air pipe to the tire valve core.

Tips:The inflation pressure of and other items is lower than the working range of the pump, and the inflation cannot be stopped automatically. Please use with caution.




3.Long press for 3 seconds to turn on the machine. Tips:The high-pressure tube and

the body will heat up after long -term operation. Please do not touch the high-pressure tube for a long time to prevent burns.

After-sales Email: mxvipservice@outlook.com

Components Overview

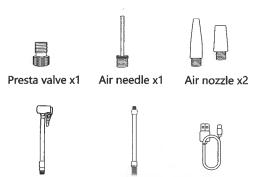

Inflatable

Charging

Before inflating other equipment, connect the exposed end of the highpressure air hose thread to the inflatable air outlet.

3 After-sales Email: mxvipservice@outlook.com



High-pressure

airinflation tube x1 extension tube x1

4).Short press the mode " **" between five inflatable modes.

Press " * for 2 seconds to enter unit switch mode.



⑤." +" ," -" means to manually increase and decrease the preset tire pressure value, each click to increase or decrease by 0.1PSI, 0.1BAR,1kPa, and 0.1Kg/cm² to the maximum and minimum values.

Tips:Long press to quickly adjust the



⑥.Preset PSI, Short press ← () *to start inflation, Auto-stop at target pressure. Tips:The air pressure will stop automatically when it reaches the preset value. You can also short press the on/off button during inflation

8 After-sales Email: mxvipservice@outlook.com

1.Presta valve

Road bikes and individual mountain bikes need to be inflated with a Prest valve.

①.Inflation: Connect the Presta valve adapter to the high-pressure pipe Schrader valve connector, unscrew the tire Presta valve screw and connect the adapter.

2).Deflate: Unscrew the Presta valve interface screw and press the air nozzle.

2.Air needle

Basketballs, soccer balls, and other balls require an air needle for inflation.

①.Inflation: Connect the air needle to the Schrader valve connector, and insert the needle into the valve inside the ball. ②.Deflation: Insert the needle directly into the ball inflation valve.

3.Air nozzle

The use of a swim spout is required to inflate the swim ring.

After-sales Email: mxvipservice@outlook.com

2.Mode switch

①. Short press on the mode button to switch between fiveinflation modes. 2).Long press the mode button to switch air pressure units (PSI/BAR/KPA/kg/cm²).

3. Professional mode: no mode icon in the display, preset pressures freely adjustable. (4). Adjustable range:

3-150 PSI/0.2-10.3 BAR

Mode	Default mode	Adjustable range	
₹ S	Bicycle mode: 45PSI	30-65PS1	
<i>&</i>	Motorcycle mode: 2.4BAR	1.8-3.0BAR	
43	Car mode: 2.5BAR	1.8-3.5BAR	
A	Ball mode: 8PSI	4-16PSI	
8	Custom Mode: 35PSI	3-150PSI	

After-sales Email: mxvipservice@outlook.com

①.Inflation: After tightening the air nozzle and the Schrader valve, insert it into the swimming ring inflation hole. (2). Deflate: Pull out the air nozzle to squeeze out the gas.

4. High pressure air inflation tube

For mountain bikes, road bikes, motorcycles, and cars.

①.Inflation: Connect the Schrader valve to the high-pressure pipe interface. ①.Deflation: Use a 4mm hexagonal tool


to press the needle inside the valve.

5.Inflatable extension tube

The inflation extension tube of the air pump can extend the inflation distance, adapt to the scene and ensure safety, making it convenient to inflate special locations and connect accessories.


After-sales Email: mxvipservice@outlook.com

3.Lighting

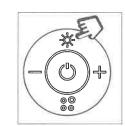

①.Long press the light button: There are two modes: constant light and strobe.

4.USB charging

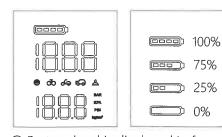

①.Battery level is displayed in four frames, the number of lit frames represents the remaining battery level.

After-sales Email: mxvipservice@outlook.com

After-sales Email: mxvipservice@outlook.com



②. As a Power Supply: The pump needs to be fully charged before first use. The pump can be charged by connecting the 5V USB adapter to the inflator with a charging cable.



②. As a power bank. You can use a USB data cable to charge your other devices.

11 After-sales Email: mxvipservice@outlook.com

5.Power on/off

①.Power on: Press and hold the power button for 2 seconds to turn on the air pump.

2). Power off: When the air pump is powered on, press and hold the power button for 2 seconds to turn off the air

3. After the air pump is powered on or fully charged, it will automatically shut down if there is no operation within 3

4. When the air pump is used as a mobile power source, only the power indicator light is on the screen. Disconnect the device being charged and the air pump will automatically shut down after 3 seconds.

The inflatable pump does not work during charging. Please purchase your own safe and compliant adapter.

12

After-sales Email: mxvipservice@outlook.com

Basic parameters

Product model	HX02
Bluetooth	2.4G
Inflation pressure	0.2-10.3Bar/3-150psi
Working voltage	6V
Working current	8-12A
USB-A Output	5V/2A
USB-C Input	5V/2A
Working temperature	≤35°C
Rated capacity	10000mAh
Storage temperature	-15℃~45℃
Product weight	717g
Product size	7.01inX2.83inX2.01in

13 After-sales Email: mxvipservice@outlook.com

Warning

1.Age limit: Only for users aged 16 and above, keep children away during inflation.

2.Battery use: Only use batteries approved by the manufacturer, avoid high temperature, impact or damage.

3. Environmental requirements: Use in a dry and clean environment, the product is not waterproof.

4. Abnormal handling: If an abnormality occurs, try to restart; if it does not work, contact customer service.

5.Usage suggestions: It is recommended to charge the battery every 3 to 6 months to help extend the battery life.

14

After-sales Email: mxvipservice@outlook.com

6.Basketball inflation: Inflate multiple times to achieve the ideal pressure.

After-sales Email: mxvipservice@outlook.com

15

7.Lithium battery safety: Avoid high

regularly.

temperature and impact, and charge

8.Storage temperature: Keep between

flammable and explosive environments.

10.Inflation monitoring: Monitor during

inflation to prevent excessive pressure.

11.Clean use: Keep dry and clean, not

12.Measurement unit: Confirm the unit

is correct before setting the inflation

pressure to prevent tire blowout.

13.Regular charging: can maintain

battery performance and meet

emergency needs.

waterproof, do not rinse with water.

-10 degrees and 45 degrees.

9.Motor safety: Do not use in

Troubleshooting

Fault	Troubleshooting methods
Slow inflation	① Make sure the power supply is sufficient. ② Check if there is any air leakage in the air pipe. ③ Confirm whether the connection parts at both ends of the air pipe are tightened. ④ Check if the inflatable items are leaking.
Powered but not inflated.	① Check if the power supply is sufficient. ② Confirm whether the current tire pressure exceeds the preset value.
Unable to increase or decrease the preset pressure.	Make sure the inflation mode is correct. Select the mode and adjust the preset value within the range of 3 to 150 psi.
Inflation is normal, but the pressure is displayed as zero	Low-pressure inflatable products such as balloons cannot be measured by this device due to range limitations.

16 After-sales Email: mxvipservice@outlook.com

Leakage in the air pipe	Fixed cyclone.
The battery icon display in the inflation state is inconsistent with the standby state.	The voltage of the power lithium battery drops significantly during the discharge process, and the voltage is consistent when powered on and in standby. This phenomenon is not a fault.
Battery level icon does not light up after charging.	Replace the adapter with a safe and compliant one and the original charging cable to recharge.
Unable to charge other devices.	Ensure sufficient power, verify 5V/2A compatibility, avoid using as a power bank when inflated, and use the original charging cable.

17 After-sales Email: mxvipservice@outlook.com

After-sales service

Contact Us on Amazon:

- 1. Go to "Your Orders" on your Amazon account.
- 2. Find the corresponding order.
- 3. Select "Problem with order" and choose the appropriate topic.

4. Select "Contact seller". If there are any problems or dissatisfaction with the use of the air pump, we sincerely hope to have an opportunity to make it right.

Via E-email

mxvipservice@outlook.com

Support Hours:

Mon-Fri: We will reply within 24 hours Weekends: We will reply within 48 hours. Please feel free to contact us if you have any questions.

Your satisfaction is our goal!

CE LA LO A ROHS Made in China

After-sales Email: mxvipservice@outlook.com

18

After-sales Email: mxvipservice@outlook.com

Domoteer **APP Instructions**



After-sales Email: mxvipservice@outlook.com

App Introduction

①Domoteer APP is an application that is compatible with smart inflatable devices. It supports connecting devices via Bluetooth to help users manage the inflation process.

Feature highlights:

- Real-time monitoring of inflation.
- Save inflation history data.
- Custom air pressure settings.

②Operating system requirements iOS: supports iOS 12.0 and above. Android: supports Android 8.0 and above.

③Function requirements Make sure the Bluetooth function of the mobile phone is normal.

App download

Method 1: Scan the QR code below to download the App



Method 2:

①Open the App Store:

iOS devices: Open the App Store. Android devices: Open the Google Play

Store.

②Search for the app:

 
Type "Domoteer" in the search bar and click Search

③Click Install:

Click the "Install" button and wait for the app to download and install automatically.

Homepage introduction





(1)Inflation

Turn on the power of the air pump

Open the Domoteer APP

The APP automatically connects to the air pump

The device sets the target air pressure

Click the start button at the bottom, the air pump starts working

The APP prompts that the inflation is completed





Device connected

Device cunonnected

After-sales Email: mxvipservice@outlook.com

5

After-sales Email: mxvipservice@outlook.com

②Air pressure setting

 
Select preset mode to set


Users can press the "+" and "-" buttons on the central control key to flexibly adjust the air pressure value according to the actual needs of the inflatable items.



Preset Mode Defaults Car: 2.5BAR Motorcycle: 2.4BAR Bicycle: 45PSI Ball: 8PSI

• Select custom air pressure value to set.



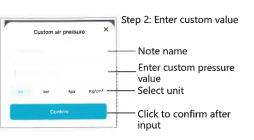




③Custom list management

• Custom lists can be added, sorted, modified and deleted.




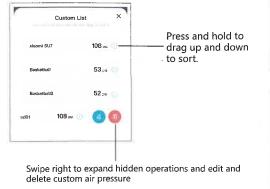

4 History

• The history function of the APP can record inflation data and save common data operations to a custom list for easy use next time, with custom file names.



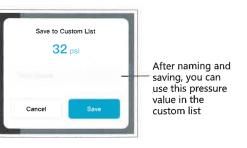

FAQ

①Q: Why can't the APP connect to the device?

A: Please check the following points: Make sure the device is turned on, fully charged, and close to the phone. Confirm that the phone's Bluetooth is turned on.

Make sure the APP is the latest version. If the problem is not solved, you can restart the device or contact customer service.

②Q: Can the APP connect to multiple devices at the same time? A: No; when multiple devices are turned

on, the APP will prioritize connecting to the device with the strongest signal. If you need to control multiple devices, please use different phones to connect.

10

After-sales Email: mxvipservice@outlook.com After-sales Email: mxvipservice@outlook.com After-sales Email: mxvipservice@outlook.com