 
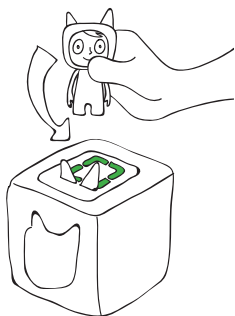 


Toniebox makes listening *easy.*

Using the Toniebox is so simple:

 
Turning On

Press one of the ears with your thumb and forefinger or place the box on its charging station.

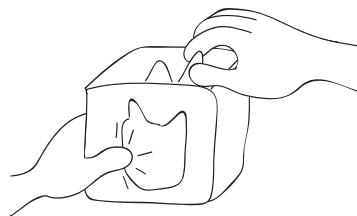


Playing and pausing

When the light on your Toniebox turns green, place a Tonie on top. Want to pause the story or song? Just remove the Tonie from the Toniebox. When you place your Tonie back on, it will pick back up from the same spot as long as another Tonie hasn't been played in between.

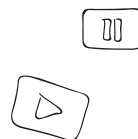


Turning the volume up and down

 Press the big ear to turn up the volume on the Toniebox. Use the little ear to turn it down.

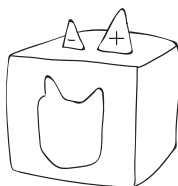

 YOU CAN SET
MAXIMUM VOLUME
AND MUCH MORE
IN YOUR
TONIE-ACCOUNT!



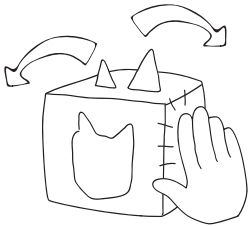


Skip back and forth

 To skip back and forth between chapters, tap your Toniebox on its side. To fast-forward or reward, tilt the box to one side.





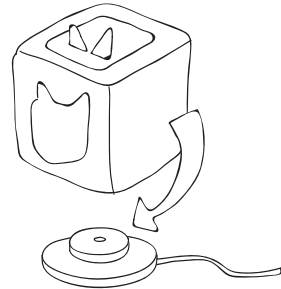


Charging your Toniebox


Even a Toniebox needs a little rest and relaxation sometimes. The LED will glow green when the battery is sufficiently charged. The LED lights up orange when the battery is low.



LED Display Overview

The Toniebox has different LED indicators. Here's a brief overview:

Color	LED Display Meaning
 Flashing green	Factory setting: Please install
 Green light	Everything's good to go. The battery is sufficiently charged and the Toniebox is ready to play.
 Pulsing blue	The Toniebox is in connection mode and can now look for new wireless internet connections.
 Flashing blue	This may mean the following: a. The Toniebox is connected to the internet and is downloading new Tonie content. b. The Toniebox is looking for available wireless internet connections before it switches into connection mode (lasts approximately 20 seconds).
 Orange light	Warning – low battery! Place your Toniebox on the charging station to recharge the battery.
 Red light	Oops! An error has occurred. Your Toniebox will tell you which error it is in a voice message.
 White light	Offline mode

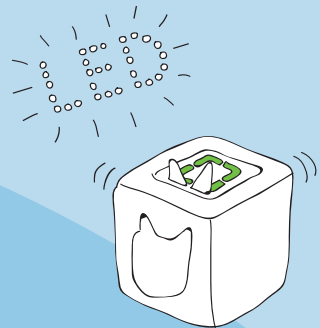 



tonies®

Warnings and safety instructions

Technical information

⚠ CAUTION-ELECTRIC TOY:

Not recommended for children under 3 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

Safety Guide

Please keep this reference guide in a safe place as it contains important information about the product and its use. Please read all safety instructions before using the Starter Set. Boxine GmbH and its suppliers assume no responsibility for any damage or loss resulting from the use of this guide. Additional support material can be found here: support.tonies.com

⚠ **WARNING:** All Tonies contain inaccessible, strong magnets. Please keep them away from medical components such as defibrillators, shunts or pacemakers as well as from magnetic sensitive products such as magnetic data carriers, credit cards or computers.

⚠ **WARNING:** The charger cord could be a strangulation hazard. Not suitable for children under 3 years of age.

⚠ **WARNING:** All packing materials, such as tape, plastic sheets, removeable tags and desiccant are not part of this toy and should be discarded for your child's safety.

Battery notice

The batteries in the device, which allow the portable use of the Toniebox are not removable. Replacement of the batteries by the user is therefore not permitted. Opening the box will void the warranty.

Safety instructions

Please note that the Toniebox is an audio device with complicated technology inside. The Toniebox is designed for use at home and is not splash- or drip-proof. Keep the unit out of direct sunlight and away from any direct heat sources. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture or immerse it in water.

Safety instructions for using the charger

⚠ CAUTION: The charger consists of the AC adapter and the charging station. The Toniebox should only be operated with the charger provided (included in the starter set), which is a special adapter for toys. Misuse of the charger may result in an electric shock. The charger must be checked regularly for conditions such as damage to the cord, plug, casing and other components that may result in the risk of fire, electric shock or injury to persons. The charger must not be cleaned with liquids. The Toniebox must be disconnected from the charger before cleaning. The charger is not a toy and should therefore only be used by adults. This is under the full responsibility of the parents. When connecting it to the outlet, please ensure that the plug is close enough and easy to reach. The charging station is a passive component and is only to be used with the Toniebox. As with all electric products, precautions should be observed during handling and use to prevent electric shock. The AC adapter may become warm during normal use. Always allow adequate ventilation to the AC adapter and use care when handling the charger. We are not responsible for the operation of third-party accessories or their compliance with safety and regulatory standards. The charger may not be replaced by a third party charger. If the cord is damaged, dispose of the charger in accordance with your local electric product recycling regulations.

⚠ CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, do not use toy any longer.

Care instructions

Please keep these instructions in mind to prolong the life of your Toniebox. The Toniebox must be disconnected from the charger before cleaning. Clean the material and top side of the Toniebox regularly with a damp microfiber cloth. Please do not use solvents, chlorides or chemical cleaning agents. Little footprints left by the Tonies on the top of the box can be removed with a plain-colored eraser. After that you can clean the area with a damp microfiber cloth.

Technical data

Toniebox

External Voltage: 9 V DC

Battery: 3 x 1.2 V AA NIMH rechargeable battery

NF:

- Loudspeaker: 1 W at 8 Ohm

- Headphone: 10 mW at 32 Ohm

Internal Memory: 8 GB

Wi-Fi 2.4 GHz, US channel 1–11, EU channel 1–13

The transmission power of the Wi-Fi is 20 dBm, the frequency band is 2400 MHz – 2483.5 MHz

NFC 13.56 MHz

AC adapter

Input: 110 V – 240 V ~ 50 - 60 Hz, 0.5 A, AC

Output: 9 V = 1.5 A = 13.5 W, DC

The Toniebox must be set up by an adult.

Technical requirements

General

Wi-Fi 2.4 GHz, US channel 1–11, EU channel 1–13
Smartphone, tablet or computer with 2.4 GHz Wi-Fi
High-speed Internet Connection

mytonies app

Android 8 or newer
iOS 11 or newer

my.tonies.com and setup

Current web browser with javascript enabled

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna

- Increase the separation between the Toniebox and the receiver

- Connect the Toniebox with the charger into an outlet on a circuit different from that to which the receiver is connected

Used electrical and electronic devices may not be disposed of with normal household waste. We kindly ask you to observe the recycling regulations applicable in your country.

Please retain address for future references:

Manufactured and imported by Boxine US, INC
Palo Alto, CA 94306, USA

tonies® and toniebox®

logos are registered trademarks of Boxine GmbH.

All other trademarks mentioned in this document are the property of their respective holders.

© Boxine GmbH 2020. All rights reserved.

For more information on troubleshooting and installation visit:

support.tonies.com

Supplier's Declaration of Conformity

Responsible Party: Boxine US, INC
Address: 3000 El Camino Real, Building 4, Suite 200
Palo Alto, CA 94306
USA
Website: tonies.com

Product Name: Playtime Starter Set
Model No.: 10001
Trade Name: Tonies®
FCC-ID: 2AU47-00001

This device complies with the FCC RF exposure compliance requirements for portable operation in accordance with Rule part 2.1093.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesirable operation.

⚠ **CAUTION:** Changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.