




User Manual

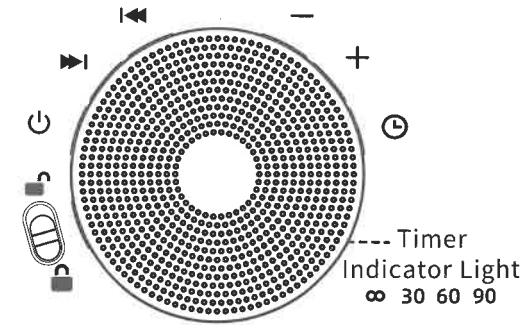









Ver-HB-A 3.0







 **Unlock Before Operation**

 All buttons are locked , but you can press & hold  to turn on the device. 1

BUTTON DEFINITION




-  **Short Press**: Turn the sound on / off.
-  **Press**: switch to last sound.
-  **Press**: switch to next sound.
-  **Press**: decrease sound volume.
-  **Press**: increase sound volume.
-  **Short Press**: set the auto-off timer.
-  **Press & Hold**: turn off timer light indicator.
-  All buttons will be unlocked & valid.
-  All buttons are locked , but you can press & hold  to turn on the sound.

Auto-off Timer Indicator Lights



-  : Continuously Play  : 60-minute Timer
-  : 30-minute Timer  : 90-minute Timer

OPERATING INSTRUCTIONS



1. Power On/Off

Short press  button to turn the sound on or off.
When the buttons are locked  , press & hold  to turn on the sound.



2. Setting Auto-off Timer

When the device is on, short press  button to set the timer. There are 4 timer light indicators which stand for sound continuously play (), 30-minute timer, 60-minute timer and 90-minute timer respectively. (When timer light indicator is on, it means the related timer is set.)

3. Adjusting Sound Volume

When the sound is on, press  button to reduce the sound volume. Press  button to increase the sound volume.



4. Switching Sound

When the device is on, Short Press  or  buttons to switch among 30 sounds in sequence.

Track list:

- | | |
|------------------------|------------------------------|
| 1. Brown Noise 1 | 2. Brown Noise 2 |
| 3. Brown Noise 3 | 4. Pink Noise |
| 5. White Noise | 6. Soft Fan |
| 7. Loud Fan | 8. Rain on Yard |
| 9. Heavy Rain | 10. Rain on Window |
| 11. Thunder Rain | 12. Stream in the Cave |
| 13. Brook | 14. River |
| 15. Gentle Sea Wave | 16. Mighty Sea Wave |
| 17. Little Sea Wave | 18. Water Drop |
| 19. Singing Birds | 20. Campfire |
| 21. Fireplace | 22. Train |
| 23. Brahms Lullabies | 24. Subote Lullabies |
| 25. Heart's Beating | 26. Hushing Sound |
| 27. Piano | 28. Alpha Wave with Dripping |
| 29. Stars in the Night | 30. Meditation |

5. Turning Off the Timer Indicator Light

When the sound is on, press & hold  button to turn off the timer indicator light. It will be on again if short press  button or the product restart.

6. Memory Feature

The previously set volume level, sound track, night light and timer will be remembered when you power on the product again.

7. Restart

Step 1: Unplug & replug the product with power.

Step 2: Hold  button for 8 seconds until it restart.

BATTERY POWER INDICATE

The timer light indicators show battery power:

Low Battery: The timer light flash fast. Please connect to the power to recharge in time.

In Charging: The timer Light flash slowly.

Full Charged: The timer light will alway be on. **5**

PACKAGE CONTENTS

- 1 X White Noise Machine
- 1 X Hanging Hook
- 1 X USB Charging Cable
- 1 X User Manual

TECHNICAL SPECIFICATIONS

- Input voltage: 5V DC
- Input current: 1000mA
- Standby power : <0.5W
- Operating temperature: 32~113 °F (0~45°C)

WARRANTY INFORMATION

If you have any product question, or you have any product issues, please contact our e-mail:

supportbodyhush@163.com

Your name: _____ Order number: _____


E-mail: _____ Phone: _____

SAFETY PRECAUTIONS


1. Non-professionals, do not disassemble the product.
2. Do not place the product in high temperature or direct flame. **6**

QUESTIONS & ANSWERS

Why can not turn the product on?

1. Ensure the Button Lock Switch is .
2. Ensure battery charged or power connected.
3. Press **+** button to increase the volume.
4. Follow item # 7 on page #5 to restart.

Why do the buttons not work and the timer indicator light keep flashing?

Switch Button Lock Switch to  and tray again.

What to do if it has issue can't be fixed?

Unplug and replug the power. Then try to restart. (Follow item # 7 on page#5.)

INFORMATION TO USER

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. **7**



BodyHush™

Greetings! Thanks for your support! Here are two tips for you!

Tip 1: Turn Off Timer Indicator Lights

Press & hold  button over 2 seconds

Tip 2: How to Play Continuously?

When the product is on, short press the  button to set the timer until the  light is on.

Tip 3: Remind For Battery Use

1. Please charge the battery over 1 hour before first time use.
2. Do not charge the battery for more than 12 hours. Suggest to unplug the power once full charged.