

Service Contact

Have questions, concerns, or feedback about Glocusent Neck Light? Email us at service@glocusent.com. Our team will respond to your email in a swift time.

You're currently covered by our 24-month worry-free warranty. But there's more! You can easily bump that up to a 36-month VIP Service warranty. It's all on us - either a replacement, a full refund or a chance to try out our new products. Simply swing by our website and register your purchase to make the upgrade, we've got your back.

www.glocusent.com/pages/warranty


Alternatively, you can scan the QR code below to register your purchase:



For Customer Service

www.glocusent.com | service@glocusent.com

GLOCUSENT ORIGINAL NECK LIGHT

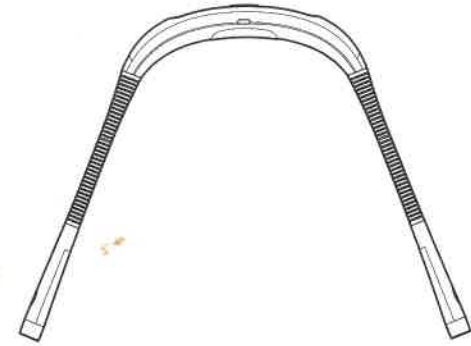

 **glocusent** | Light Up Your Chapters

Hey there,

I'm Mason, the founder of Glocusent. I'm excited to introduce Glocusent Neck Light, a revolutionary product designed to combine style, convenience, and portability. Meanwhile, I want to share the reasons behind creating this neck light and the key benefits it brings to all the avid readers, knitters or craftsmen.

We understand the joy and importance of reading. However, traditional book lights have limitations, requiring hand usage or taking up desk space. That's why we developed a hands-free lighting solution. Glocusent Neck Light's unique design integrates a comfortable neck bracket, allowing you to carry it effortlessly and illuminate your books or target area anywhere. Whether in bed, on the couch, or on the go, you can enjoy reading with freedom and comfort.


Our aim is to enhance your reading experience with Glocusent Neck Light. By eliminating lighting constraints, you can immerse yourself in the world of words and explore knowledge without disturbing your neighbor. This portable neck light will be your trusted reading companion.

As an industry leader, Glocusent is driven by passion and innovation. We envision creating a better reading experience for book enthusiasts worldwide. With your collaboration and feedback, we will continue to improve and innovate.

We look forward to being part of your reading journey and shaping the future of reading together.

Sincerely,
Mason

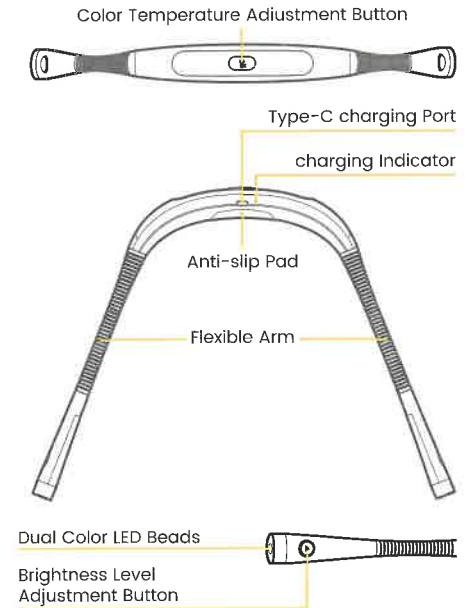


1





2

Instruction


Brightness Level

- Short Press Once for General Reading -----  Level 1
- Short Press Twice for Brighter Reading -----  Level 2
- Short Press Three Times for Precise Reading -----  Level 3
- Short Press Four Times to Turn Off -----

Color Temperature

- Short Press Once for Yellow Light -----  3000K
- Short Press Twice for Warm White Light -----  4000K
- Short Press Three Times for Cool White Light -----  6000K

Independent Control For Each Head



3

Precautions

- Use 5V-1A output wall plug to make sure the neck light is working at its full capacity.
- The power indicator light will turn red when the neck light is connected with power.
- Please avoid placing this light in an extreme temperature environment (either too hot or too cold)
- Disposal: when you are ready to dispose of the product after wearing it out, please make sure to follow the instructions of your local government for environmental and safety purposes.

How to Charge the LED Neck Reading Light

- ① Plug the Type-c cable into the charging port, and connect it with a 5V-1A power plugger.
- ② It takes about 3 hours to fully charge the LED neck reading light.
- ③ Please fully charge the product before first use.

Note: The indicating light is in solid red when it's charging, and the indicating light will be green when the book light is fully charged.

4

Product Specifications

Model	GLCSNTBL001
Brightness	6lm - 60lm(Each Head)
Color Temperature	3000K, 4000K, 6000K
Battery	Lithium
Battery Capacity	1000mAh
LED Beads	2 LEDs(One for Each Head)
Dimensions	7.5*9.8*1.1 in/19*24.9*2.8 cm
Neck Light Weight	4.8 oz / 137 g
Certificates	FCC, PSE, CE, C-Tick
Input	5V=1A

Include

Glocusent Original Neck Reading Light	1
User Manual	1
Type-C Cable	1
Bookmark	1